

GENEX REMOTE CONTROL VIA RS232 PORT


The RS232 port is located on the COM OUT connector. Here are the details.

**PC
9 Pin Connector**

Pin 2 Rx. -----
Pin 3 Tx. -----
Pin 5 Ground -----

**Genex COM OUT
RJ-45 Connector**

Pin 6 Tx.
Pin 4 Rx.
Pin 5 Ground

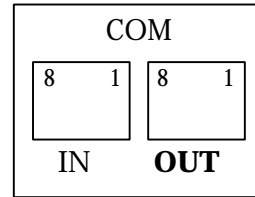

RS232 Com Port Setup 9600 Baud Rate
8 Data Bits
1 Stop Bit
Parity = None