



Special Commands for Intercept® Domes using AD2083 Translator

Bulletin No.: 97-3011

Date: June 9, 1997

Product Affected: IDS08 and IDS14 Intercept® Domes with AD2083 Translator

The table below lists the commands for setting and operating special functions with Intercept® domes that are connected to an American Dynamics control system using the AD2083 Translator.

<u>Function</u>	<u>Action</u>	<u>Command</u>
Configure Dome	Resets Dome	Call preset 72 followed by set preset 72
Clear Screen	Clears dome messages/titles	Set preset 41
Flip 180°	Pans camera 180° from current position	Call preset 40
Zoom Speed	Sets camera zoom speed	Call presets 41-44, with preset 41 being the slowest speed and preset 44 being the fastest speed.
Focus Speed	Sets camera focus speed	Call presets 45-48, with preset 45 being the slowest speed and preset 48 being the fastest speed.
Pattern Start Point	Sets start position of automatic pattern*	Set preset 43
Pattern Stop Point	Sets stop position of automatic pattern*	Set preset 33
Run Pattern	Starts automatic pattern	Call preset 33
Turbo Speed On	Enables high speed camera movement	Call preset 51
Turbo Speed Off	Disables high speed camera movement	Call preset 50

* The automatic pattern feature records each camera position between the start point and the stop point as the camera is moved by using the pan/tilt/lens control functions. Refer to the Installation/Operation Manual for your dome's receiver/driver for instructions on how to set patterns.