

# BBV Rx100 Interface Receiver

**Addendum to manual for the following domes:**



## **360 Vision VisionDome**

**Rx100 software RX1\_31V1**  
**(for use with PCB 97002 issue 4 only)**

## **Application Notes**

The RX 100 provide the following functionality when controlling the above mentioned domes

Variable speed Pan/Tilt.

Zoom/Focus, Focus/Iris Override returning to auto after Zoom In/Out.

16 Full scene presets.

2 preset patrols.

Slow preset tour. Started by pressing AUTOPAN (As patrol 1 but slow speed movement and 10 second dwell)

5 minute datum/park driving to preset 1 or slow preset tour. Disabled by removing link J6/1-2

Program up to 16 privacy zones

Additional commands:

AUTOPAN: Pressing the AUTOPAN key will run the domes preset tour at slow speed between the patrol 1 preset positions.

| Advanced Features       | Tx400 | Tx1000     | Tx1500 | DM DS/DS2/BX2 Mux        |
|-------------------------|-------|------------|--------|--------------------------|
| 180 degree pan flip     | '# 1  | '# WASH    | 1 '#   | *889 002 or *889 10 10 2 |
| Privacy SET (enable)    | '# 2  | '# WIPE    | 2 '#   | *889 003 or *889 10 10 3 |
| Privacy CLEAR (disable) | '# 3  | '# AUTOPAN | 3 '#   | *889 004 or *889 10 10 4 |
| Reset dome parameters   | '# 4  | '# LIGHTS  | 4 '#   | *889 005 or *889 10 10 5 |

The dome and Rx100 are linked using RS485 for control and video for the camera signal.

| Rx100 | Description | Dome connection |
|-------|-------------|-----------------|
| J3-C1 | TX-/B       | D-              |
| J3-C2 | TX+/A       | D+              |

### Notes:

The dome address must be set at 1 for all the cameras that are controlled using a Rx100. Check with the dome manual if you have any doubts.

The alarm output relay opens for approx 5 seconds upon power up and following any active alarm input.

If the slow preset tour is running, start patrol 1 & 2 is inhibited. The dome will be driven to a preset following an alarm activation. 60 seconds after alarm, the tour will restart. A manual goto preset and lens control will stop the tour leaving the AUTOPAN led on until the next manual pan command.

A datum/park mode is offered that drives the dome to preset 8 following 5 minutes of inactivity. This can be disabled by removing the link fitted across J6/pin 4 & 5.

### Privacy zone programming.

The keystrokes shown assume use of a TX1500. Use the keystroke shown above if using another controller.

### Programming a zone

The Rx100 can be used to program 16 privacy zones. The same procedure that is used to program a preset position is used to program or clear a privacy zone. To instruct the Rx100 to program a privacy zone press 2# followed by program preset 1 – 16. The screen will then go blank showing that the privacy zone has been set.

### Clearing a zone

To clear/delete a privacy zone press 3# followed by program preset 1 – 16. The relevant privacy zone will then be disabled and the dome will move to show the zone that has been disabled so that the zone can easily be re-enabled if disabled in error.

### J6 Links

J6/1-2 fitted to enable the 5 minute datum mode. After 5 minutes of inactivity the dome will be driven to either preset 1 or a slow preset tour is started depending upon link J6/4-5. J6/4-5 fitted = goto preset 1, removed = start slow preset tour.

**Intended for up-the-coax control.**

**When using 20mA TP telemetry control maybe slightly sluggish.**