


10. REMOTE CABLE WIRING

The cable indicated below is used for remotely controlling the camera.

Connector (camera side) : HR10-7R-6SA (Hirose) or equivalent

Plug (cable side) : HR10A-7P-6P(Hirose) or equivalent

- Notes:** At the camera Remote plug, connect pin 4 Manual/remote and pin 5 ground.
- At the computer serial interface connector (D-SUB), short pins 7(RTS) and 8(CTS).

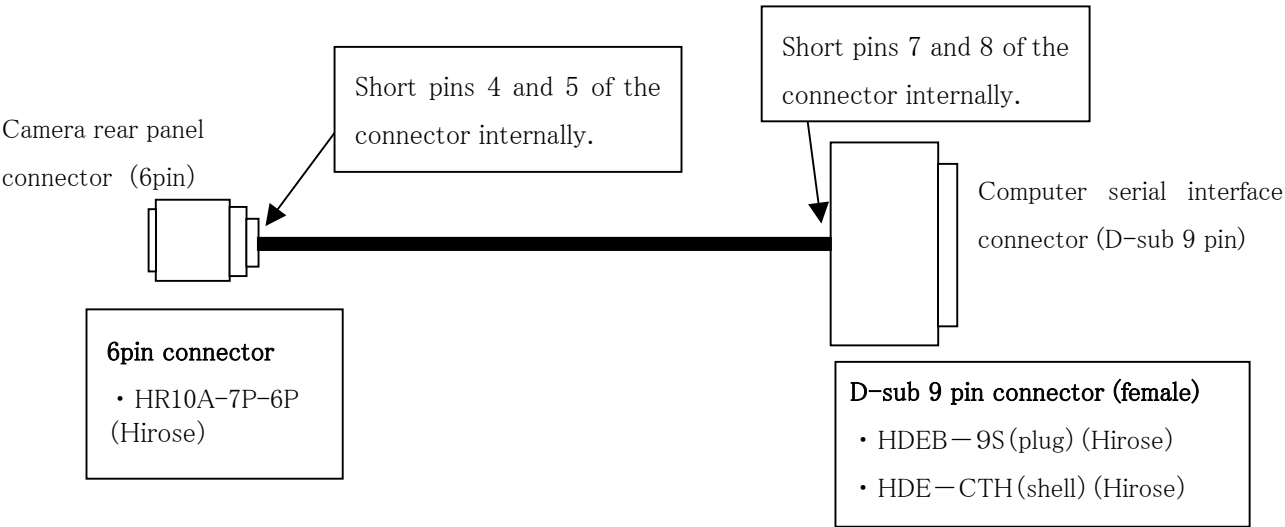

Wiring			
6 pin connector (camera)		9 pin connector (PC)	
Signal name	PIN No.	PIN No.	Signal name
	1	1	
RxD	2	2	RxD
TxD	3	3	TxD
MAN/REM	4	4	
GND	5	5	GND
	6	6	
		7	RTS
		8	CTS
		9	