

< VK-S454 >

HITACHI CONFIDENTIAL PROPRIETARY

454_mode_11201.xls

2001.1.12

[[Program AE mode]]		<Ref. Illuminance>		<350 lx>	1lx>	<35 lx>	<8.5 lx>	1lx>	<0.3 lx>	MANUAL IRef ON/OFF
Pro-AE	Pro-AE							(3.0 lx)		
Pro-AE+	Pro-AE	<IRIS area>		<AGC area>		<DSS area>		DSS	(0.2 lx)	MANUAL IRef ON/OFF
Pro-AER1	Pro-AE	delay times : > 8s threshold : > 400		delay times : > 5s threshold : < 30 lx						
		ON $\uparrow$ min		17dB OFF				IRef OFF	(0.3 lx)	
Pro-AER1	Pro-AE	delay times : > 8s threshold : > 400		delay times : > 5s threshold : < 30 lx						
S/N priority mode		ON $\uparrow$ min		17dB OFF				IRef OFF + DSS	(0.02 lx)	
Pro-AER2	Pro-AE	delay times : > 8s threshold : > 180 lx		delay times : > 5s threshold : < 4.0 lx						
		ON $\uparrow$ 5dB		17dB OFF				IRef OFF	(0.3 lx)	
<default> Pro-AER2	Pro-AE	delay times : > 8s threshold : > 40 lx		delay times : > 5s threshold : < 1.0 lx						
Balance mode		ON $\uparrow$ 17dB		1/8s OFF				DSS + IRef OFF	(0.02 lx)	
Pro-AER+3	Pro-AE	delay times : > 8s threshold : > 10 lx		delay times : > 5s threshold : < 0.1 lx						
Color priority mode		ON $\uparrow$ max		1/4s OFF				DSS + IRef OFF	(0.02 lx)	

[[CAMERA status]]

<default>	MANUAL WDR ON/OFF	MANUAL RVS ON/OFF		DSS ON/OFF AUTO		MANUAL WDR ON/OFF	MANUAL RVS ON/OFF																																
Normal <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	X	RVS	X	WDR	X	FRZ	X	X X X X	X X X X	Normal <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	X	RVS	X	WDR	X	FRZ	0	FRZ Keep	DSS+ Normal <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	0	RVS	X	WDR	X	FRZ	0	X X X X	DSS+ Normal <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	0	RVS	X	WDR	X	FRZ	X
DSS	X																																						
RVS	X																																						
WDR	X																																						
FRZ	X																																						
DSS	X																																						
RVS	X																																						
WDR	X																																						
FRZ	0																																						
DSS	0																																						
RVS	X																																						
WDR	X																																						
FRZ	0																																						
DSS	0																																						
RVS	X																																						
WDR	X																																						
FRZ	X																																						
	ON OFF		MANUAL RVS ON/OFF	DSS ON/OFF WDR AUTO	FRZ Keep	MANUAL WDR ON/OFF	MANUAL RVS ON/OFF	DSS+ Normal <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	0	RVS	X	WDR	(0)	FRZ	0																							
DSS	0																																						
RVS	X																																						
WDR	(0)																																						
FRZ	0																																						
WDR <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>0</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	X	RVS	X	WDR	0	FRZ	X	X X WDR 0 X	X X WDR 0 X	WDR <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>0</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	X	RVS	X	WDR	0	FRZ	0	FRZ Keep	DSS+ Normal (WDR) <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	0	RVS	X	WDR	(0)	FRZ	0	X (0) X X	DSS+ Normal (WDR) <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	0	RVS	X	WDR	(0)	FRZ	X
DSS	X																																						
RVS	X																																						
WDR	0																																						
FRZ	X																																						
DSS	X																																						
RVS	X																																						
WDR	0																																						
FRZ	0																																						
DSS	0																																						
RVS	X																																						
WDR	(0)																																						
FRZ	0																																						
DSS	0																																						
RVS	X																																						
WDR	(0)																																						
FRZ	X																																						
	MANUAL WDR ON/OFF	ON OFF		DSS ON/OFF WDR AUTO	FRZ Keep	MANUAL WDR ON/OFF	MANUAL RVS ON/OFF	DSS+ Normal (WDR) <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>X</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	0	RVS	X	WDR	(0)	FRZ	X																							
DSS	0																																						
RVS	X																																						
WDR	(0)																																						
FRZ	X																																						
RVS <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	X	RVS	0	WDR	X	FRZ	X	X RVS 0 X X	X RVS 0 X X	RVS <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	X	RVS	0	WDR	X	FRZ	0	FRZ Keep	DSS+ RVS <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	0	RVS	0	WDR	X	FRZ	0	X 0 X X	DSS+ RVS <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>X</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	0	RVS	0	WDR	X	FRZ	X
DSS	X																																						
RVS	0																																						
WDR	X																																						
FRZ	X																																						
DSS	X																																						
RVS	0																																						
WDR	X																																						
FRZ	0																																						
DSS	0																																						
RVS	0																																						
WDR	X																																						
FRZ	0																																						
DSS	0																																						
RVS	0																																						
WDR	X																																						
FRZ	X																																						
	ON OFF	ON OFF	MANUAL RVS ON/OFF	DSS ON/OFF WDR AUTO	FRZ Keep	MANUAL WDR ON/OFF	MANUAL RVS ON/OFF	DSS+ RVS <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	0	RVS	0	WDR	(0)	FRZ	0																							
DSS	0																																						
RVS	0																																						
WDR	(0)																																						
FRZ	0																																						
RVS (WDR) <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	X	RVS	0	WDR	(0)	FRZ	X	X RVS 0 (0) X	X RVS 0 (0) X	RVS (WDR) <table><tr><td>DSS</td><td>X</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	X	RVS	0	WDR	(0)	FRZ	0	FRZ Keep	DSS+ RVS (WDR) <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>0</td></tr></table>	DSS	0	RVS	0	WDR	(0)	FRZ	0	X (0) X X	DSS+ RVS (WDR) <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	0	RVS	0	WDR	(0)	FRZ	X
DSS	X																																						
RVS	0																																						
WDR	(0)																																						
FRZ	X																																						
DSS	X																																						
RVS	0																																						
WDR	(0)																																						
FRZ	0																																						
DSS	0																																						
RVS	0																																						
WDR	(0)																																						
FRZ	0																																						
DSS	0																																						
RVS	0																																						
WDR	(0)																																						
FRZ	X																																						
	ON OFF	ON OFF	MANUAL RVS ON/OFF	DSS ON/OFF WDR AUTO	FRZ Keep	MANUAL WDR ON/OFF	MANUAL RVS ON/OFF	DSS+ RVS (WDR) <table><tr><td>DSS</td><td>0</td></tr><tr><td>RVS</td><td>0</td></tr><tr><td>WDR</td><td>(0)</td></tr><tr><td>FRZ</td><td>X</td></tr></table>	DSS	0	RVS	0	WDR	(0)	FRZ	X																							
DSS	0																																						
RVS	0																																						
WDR	(0)																																						
FRZ	X																																						

<VK-S454 MODE>