


Rx 100 *Interface Receiver*

Addendum to manual for the following domes:

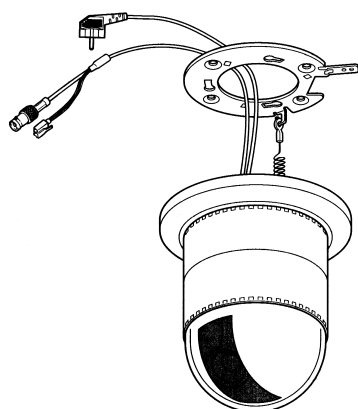

**Panasonic WV-CSR400 series.
WV-CSR600 series.
WV-CSR650 series.**

(Rx1_P1V4)

Application Notes

Variable speed Pan/Tilt.
Zoom/Focus, Autofocus, Iris Open/Close (AutoFocus with 600 & 650 series)
16 full scene presets (600 & 650 series dome)
2 preset patrols (600 & 650 series dome)
4 alarm inputs driving to preset 1 - 4. ("")
Autopan added with Version 4.

Advanced Features	Tx1000	Tx400	DM Sprite/Uniplex
Entry/Exit Dome Menu	'#' WASH	'#' 1	*889 002
Select Menu Item	'#' WIPE	'#' 2	*889 003
Escape to Previous Menu	'#' AUTOPAN	'#' 3	*889 004
Reset dome (Iris to Auto)	'#' LIGHTS	'#' 4	*889 005

Autopan is started by selecting Autopan on the Transmitter. The Autopan stops can be programmed from within the dome menu. Please refer to dome user manual for exact details.

RS485 control of dome. Connect dome FCC-68 plug into J7 of Rx100. If the dome cable requires extending, connect cores as follows:

Dome Cable	Description	Rx100
Yellow	Data-	J3/C1
Green	Data+	J3/C2

Notes:

The alarm output relay opens for approx 2 seconds upon power up. This can be used to signal power loss, etc.

Accessing the dome menus.

Press either '#WASH', '#1' or *889 002 key strokes to Enter Menu. Use Pan/Tilt to highlight item. Press either '#WIPE', '#2' or *889 003 key strokes to select menu item. To exit from menu, press either '#WASH', '#1' or *889 002.

Check with the multiplexer manual for exact procedure for entering * commands.

IMPORTANT: Dome settings: Select dome address 01. Communications must be 19200, N, 8, 1. If dome cannot be controlled, see dome manual section to reset dome to factory default.