# SPOT CANCEL FOR VK-S454 SERIES

[REV. 1.1]

This manual applies to the following models:

<<u>NTSC> VK-S454</u>

<PAL> VK-S454E

# CONTENTS

S45	4 SPOT CANCEL	<u>3</u>
1. V	Vhite Spot compensation:	4
a)	Specification	4
b)	Command:	4
i)	White Spot Detection & Start Compensation:	4
ii)	Detection condition: (DSS ON/OFF)	
iii)	DSS Shutter Speed setting (Effective only with DSS ON )	5
iv)	Threshold Level setting:	5
v)	Location data check:	5
vi)	Location check:	6
vii)	Write the detected spot data into the EEPROM	6
c) É	LOW CHART	
i)	Spot Detection:	7
ií)	Spot data read-out:	
iii)	Spot data check:	
ivĺ	Write-in spot location data:	q

# • S454 SPOT CANCEL

# 1. White Spot compensation:

## **Specification**

The white-spot will be searched/detected and compensated automatically every time after the power on then these detected white-spots address data can be written to EEPROM for priority compensation. Refer to Fig.1 for the detection spec.

Fig.1 White Spot Detection Function Spec

No. of compe	nsation	10 Max. [*1]
Write to EEPI	ROM	5 Max.
	AGC	MAX.(Use with AGC MAX setting)
Detection Function	DSS	OFF / ON Selectable Selectable Shutter speed during DSS ON
	Threshold	Set by EEPROM

### [Note]

For example: If 5 spots data have been written to EEPROM, the Max. compensation capacity during power on will be 5 spots.

### Command: b)

### White Spot Detection & Start Compensation:

Automatically detects White Spots every time power turns on Therefore, the RAM Initialization (Com 454 v16.doc) or Power Reset is required for new detection.

<Reference>

RAM Initialize command address = FCAC

:WFCAC00

### ii) **Detection condition: (DSS ON/OFF)**

address = 10A0

 $:W10A0X_{1}X_{0}$  $X_1X_0 = H'05 \text{ (default)}$ bit 7 of  $X_1X_0$ ; 1: Detect during DSS ON

: 0 : Detect during DSS OFF (default)

### [Note]

Detection during DSS ON: Takes longer time for picture appearance.

(The picture appearance time will vary according to the DSS shutter speed setting,

threshold level and total number of white spots in the screen.)

<sup>\*1: 10</sup> spots including 5 spots for EEPROM writing.

### iii) DSS Shutter Speed setting (Effective only with DSS ON )

### [Note]

The noise on the screen might be mistaken detected as white-spots when if DSS Shutter speed changed from default setting so the threshold level should be adjusted appropriately.

### iv) Threshold Level setting:

```
address = 109E

:r109E0000

:w109EX<sub>3</sub>X<sub>2</sub>X<sub>1</sub>X<sub>0</sub> ; X<sub>3</sub>X<sub>2</sub>X<sub>1</sub>X<sub>0</sub> = H'01E0 (default)

; max. H'03FF
```

### [Note]

The noise on the screen might be mistaken detected as white-spots or will not be detected actual white-spot at all when if the threshold level is not set appropriately.

### v) Location data check:

Read 10 byte continuously to check the detected spot location data.

The read out data for "PPPP", "QQQQ", "SSSS", "TTTT", "UUUU","VVVV", "WWWW", "XXXX", "YYYY", "ZZZZ" of the following command will be the white-spot location data.

### [Note]

Read out data H'0000: No white-spot is existed = No location data. Duplicated location data may be displayed.

```
[V SPOT 1] address = FF14
:rFF14PPPQQQQSSSSTTTTUUUU

[V SPOT 2] address = FF16
:rFF16VVVVWWWWXXXXYYYYZZZZ

[H SPOT 1] address = FF18
:rFF18PPPQQQQSSSSTTTTUUUU

[H SPOT 2] address = FF1A
:rFF1AVVVVWWWXXXXYYYYZZZZ
```

### vi) Location check:

Confirm the detected white-spot location.

Write the location data which were read out from the above v) to the following address: White cursor will be displayed under the detected white-spot location. Please Note that all white-spots automatically detected and compensated during power on will be cleared with this function.

[V SPOT] address = FF2A

 $:wFF2AX_{3}X_{2}X_{1}X_{0} \\ \hspace*{1.5cm} ; \hspace*{0.5cm} X_{3}X_{2}X_{1}X_{0} - \text{Location data}$ 

= H'0000 - No setting

[H SPOT] address = FF2C

 $:wFF2CX_3X_2X_1X_0 \qquad \qquad ; \ X_3X_2X_1X_0-Location \ data$ 

= H'0000 – No setting

[CHECKE] address = FF20

:RFF2000 :WFF20X<sub>1</sub>X<sub>0</sub>

DATA(X <sub>1</sub> X <sub>0</sub> )	Condition		
H'04	Cursor ON		
H'0C	Blinking Cursor		
H'1C	Compensation OFF (White-spot will be appeared)		
H'00	Confirmation OFF [default]		

[Note]

If no cursor is appeared on the screen:

- · An error in data setting
- · White-spot is located inside the Vertical Blanking area


### vii) Write the detected white-spot data into the EEPROM:

	H address	V address
SPOT1	:w120EY <sub>3-1</sub> Y <sub>2-1</sub> Y <sub>1-1</sub> Y <sub>0-1</sub>	:w120CX <sub>3-1</sub> X <sub>2-1</sub> X <sub>1-1</sub> X <sub>0-1</sub>
SPOT2	:w1212Y <sub>3-2</sub> Y <sub>2-2</sub> Y <sub>1-2</sub> Y <sub>0-2</sub>	$:$ w1210 $X_{3-2}X_{2-2}X_{1-2}X_{0-2}$
SPOT3	$:$ w1216 $Y_{3-3}Y_{2-3}Y_{1-3}Y_{0-3}$	$:$ w1214 $X_{3-3}X_{2-3}X_{1-3}X_{0-3}$
SPOT4	: w121AY <sub>3-4</sub> Y <sub>2-4</sub> Y <sub>1-4</sub> Y <sub>0-4</sub>	:w1218X <sub>3-4</sub> X <sub>2-4</sub> X <sub>1-4</sub> X <sub>0-4</sub>
SPOT5	: w121EY <sub>3-5</sub> Y <sub>2-5</sub> Y <sub>1-5</sub> Y <sub>0-5</sub>	:w121CX <sub>3-5</sub> X <sub>2-5</sub> X <sub>1-5</sub> X <sub>0-5</sub>


H'  $Y_{3-N}Y_{2-N}Y_{1-N}Y_{0-N}$ ; H direction location data (order No.) H'  $X_{3-N}X_{2-N}X_{1-N}X_{0-N}$ ; V direction location data (order No.)

### c) FLOW CHART


### i) Spot Detection:

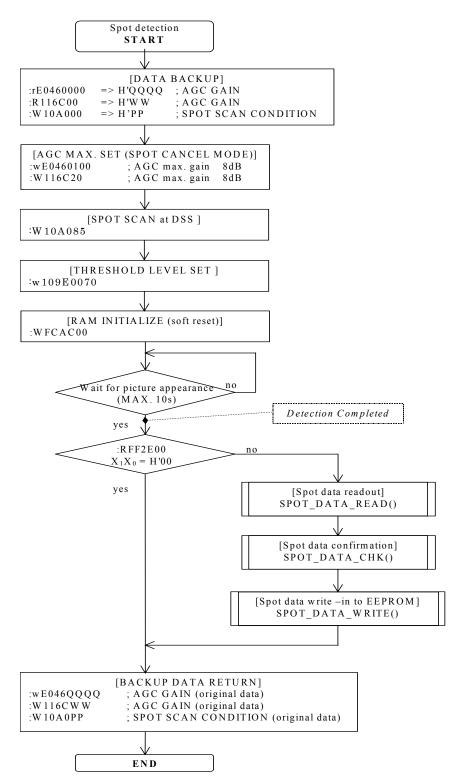


### ii) Spot data readout:

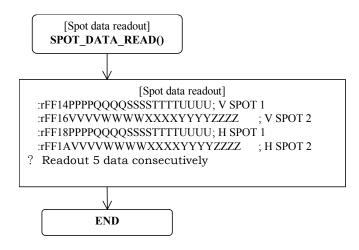

### iii) Spot data check:

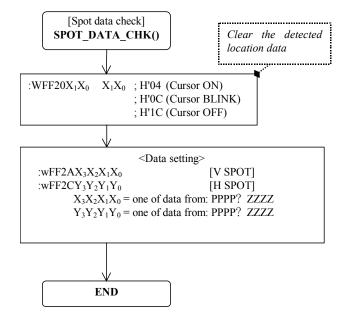

### iv) Write-in the spot location data:

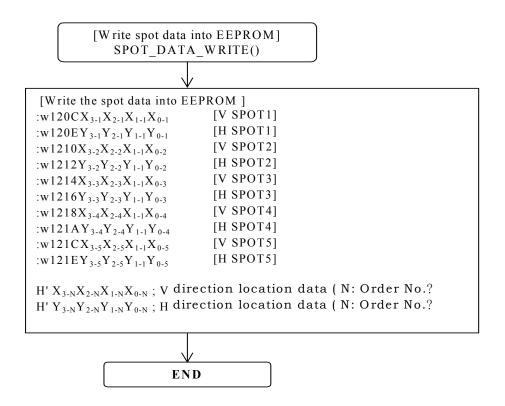

[REV. 1.0] 2001/08/31

\* New Version release (VK-S454, VK-S454E)

[REV. 1.1] 2002/01/23

<revision> DSS Shutter Speed setting
":W109CX<sub>1</sub>X<sub>0</sub>" [mistake]":W10A0X<sub>1</sub>X<sub>0</sub>" \* Page.5 [true]":W109CX<sub>1</sub>X<sub>0</sub>" [mistake]":W10A0X e.7 <revision> Spot detection flow chart