

# Model 2083-02B Code Translator

SpeedDome LT, Outdoor SpeedDome, SpeedDome Ultra, and  
Mini Dome

## Installation and Operation Instructions

The 2083-02B Code Translator is used to interface American Dynamics' Switching Systems with SpeedDomes, Outdoor SpeedDomes, SpeedDome LTs, SpeedDome Ultras, and Mini Domes.


This software/firmware is confidential to and is copyrighted by SENSORMATIC ELECTRONICS CORPORATION. It is not to be copied or disclosed in any manner without the express written consent of SENSORMATIC. The software is furnished to the purchaser under a license for use on a single system.

NOTE: Information furnished by SENSORMATIC is believed to be accurate and reliable. However, no responsibility is assumed by SENSORMATIC for its use; nor for any infringements of other rights of third parties which may result from its use. No license is granted by implications or otherwise under any patent or patent rights of SENSORMATIC.

Copyright 1997 by SENSORMATIC. All rights reserved.



The installation of this product should be made by qualified service personnel and should conform to all local codes.

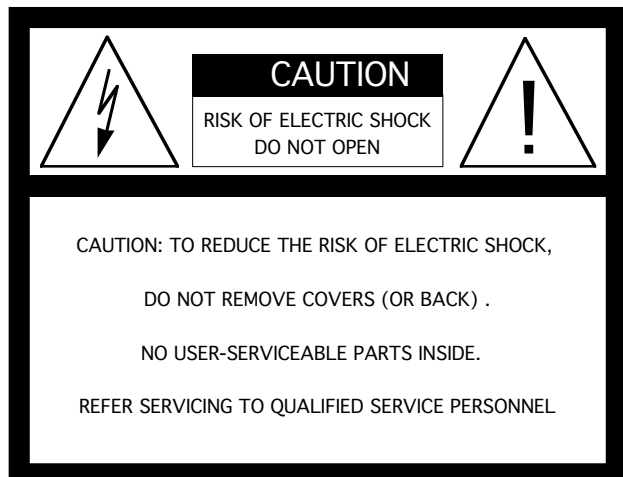

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



## UNPACKING AND INSPECTION

Unpack carefully. This is an electronic product and should be handled as such. Compare the items received with the packing list with your order.

Be sure to save:

1. The shipping cartons and insert pieces. They are the safest material in which to make future shipments of the product.
2. The IMPORTANT SAFEGUARDS sheet.
3. These Installation and Operating Instructions.

This equipment has been tested and found to comply with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

## MAINTENANCE

User maintenance of this unit is limited to external cleaning and inspection. For specific recommendations refer to the IMPORTANT SAFEGUARDS sheet packaged with this product.

## INSTALLATION AND SERVICE

If you require information during installation of this product or if service seems necessary, contact the Sensormatic Repair and Service Department at (800) 442-2225. You must obtain a Return Authorization Number and shipping instructions before returning any product for service.

Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Refer all servicing to qualified personnel.



## Table of Contents

|                                |    |
|--------------------------------|----|
| Product Description .....      | 1  |
| Installation .....             | 1  |
| Setup .....                    | 2  |
| Connections .....              | 3  |
| Operation .....                | 4  |
| APPENDIX                       |    |
| Typical Connections .....      | A1 |
| SpeedDome Address Tables ..... | A5 |



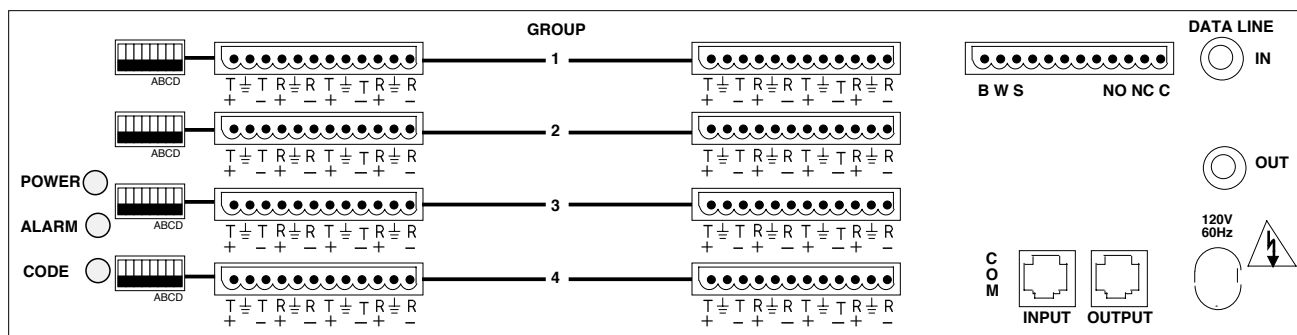


Figure 1-2083-02B Code Translator Rear Panel

## PRODUCT DESCRIPTION

The 2083-02B Code Translator is used as an interface to American Dynamics switching systems. The 2083-02B allows for the use of SpeedDome LT, SpeedDome, Outdoor SpeedDome, SpeedDome Ultra, and Mini Domes with an American Dynamics switch and control system.

This unit interfaces with the SpeedDome LT, SpeedDome, Outdoor SpeedDome, SpeedDome Ultra, and Mini Dome. When using the AD Manchester Control Code interface, this unit can control up to 128 domes with AD1650 switchers, and 32 domes with AD2150 switchers. Multiple 2083-02B units can be used to control additional domes with the Control Code interface. When using the Data Line interface, the 2083-02B can control up to 512 domes with 1995 systems, and 1024 domes with 2050/1024 systems.

## FEATURES

- ☛ Universal Mount Cabinet
- ☛ LED Power /Alarm/Code Indicator
- ☛ DIP Switch Selection for Camera Group
- ☛ DIP Switch Configuration for Baud Rate
- ☛ Screw Terminal Wire Connector
- ☛ DIP Switch Dome Type Selection
- ☛ AD Manchester Control Code
- ☛ High Speed Data Line

**IF YOU ENCOUNTER ANY PROBLEMS  
OPERATING THIS UNIT, OR NEED TECHNICAL  
ASSISTANCE, CALL OUR SERVICE CENTER AT:**

**within the United States 1-800-442-2225  
outside the United States (845) 624-7640**

## INSTALLATION

The universal cabinet of the 2083-02B Code Translator may be surface or rack mounted in any convenient location with adequate ventilation.

### Rack Mounting

As shipped, with the mounting ears flush with the front panel, the 2083-02B Code Translator can be mounted into the front of a standard 19-inch rack. The ears of the 2083-02B Code Translator can be removed and reinstalled such that they are flush with the rear panel. This allows the 2083-02B to be mounted to the rear of a rack that is equipped with mounting channels.

For proper ventilation allow at least three feet (1m) from the rear of the racks to any wall, and one EIA rack height, 1.75 inches (4.5cm), between units in a rack.

### Wall Mounting

The Code Translator can be mounted to the wall by reinstalling the ears perpendicular to the side of the unit. The unit can be installed with either the bottom or the top cover facing the wall and the front or the rear panel facing upwards.

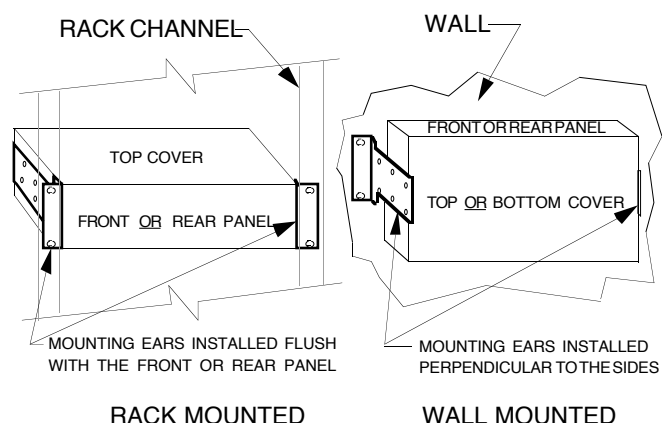


Figure 2 - Mounting Options

## SETUP

### SETUP

#### Camera Block Assignments

Four 8-position DIP switches (S1, S2, S3, and S4) are located on the rear panel of the unit, as shown in Figure 1, page 1. The settings of these switches determine the cameras associated with the connectors in each of four selective groups. The active positions for each DIP switch are labeled A, B, C, and D (see Figure 1). Table 1 shows the switch settings that correspond to camera assignments for SpeedDomes and Mini Domes.

**Note:** When used with the AD1650 switcher, one 2083-02B Code Translator accepts inputs 1-64. A second 2083-02B unit is required for inputs 65 through 128.

**Table 1 - S1, S2, S3, and S4 Setup**

#### All SpeedDome Models

| Video Input<br>Camera #s | Switch Positions (0=OFF, 1=ON) |   |   |   |
|--------------------------|--------------------------------|---|---|---|
|                          | A                              | B | C | D |
| * 1-99                   | 0                              | 0 | 0 | 0 |
| 100-198                  | 0                              | 0 | 0 | 1 |
| 199-297                  | 0                              | 0 | 1 | 0 |
| 298-396                  | 0                              | 0 | 1 | 1 |
| 397-495                  | 0                              | 1 | 0 | 0 |
| 496-594                  | 0                              | 1 | 0 | 1 |
| 595-693                  | 0                              | 1 | 1 | 0 |
| 694-792                  | 0                              | 1 | 1 | 1 |
| 793-891                  | 1                              | 0 | 0 | 0 |
| 892-990                  | 1                              | 0 | 0 | 1 |
| 991-1024                 | 1                              | 0 | 1 | 0 |

#### Mini Dome

| Video Input<br>Camera #s | Switch Positions (0=OFF, 1=ON) |   |   |   |
|--------------------------|--------------------------------|---|---|---|
|                          | A                              | B | C | D |
| * 1-79                   | 0                              | 0 | 0 | 0 |
| 80-158                   | 0                              | 0 | 0 | 1 |
| 159-237                  | 0                              | 0 | 1 | 0 |
| 238-316                  | 0                              | 0 | 1 | 1 |
| 317-395                  | 0                              | 1 | 0 | 0 |
| 396-474                  | 0                              | 1 | 0 | 1 |
| 475-553                  | 0                              | 1 | 1 | 0 |
| 554-632                  | 0                              | 1 | 1 | 1 |
| 633-711                  | 1                              | 0 | 0 | 0 |
| 712-790                  | 1                              | 0 | 0 | 1 |
| 791-869                  | 1                              | 0 | 1 | 0 |
| 870-948                  | 1                              | 0 | 1 | 1 |
| 949-1024                 | 1                              | 1 | 0 | 0 |

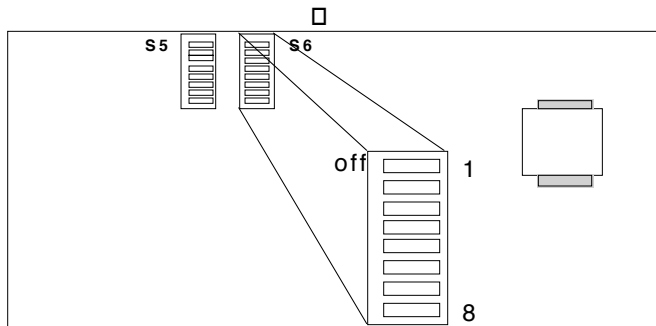


Figure 3 - Location of DIP Switches on PCB

#### Internal Setups

##### - CAUTION -

The following internal adjustments, requiring removal of the top cover, will expose hazardous-voltage components and allow access to dangerous electric shock potentials. These internal adjustments should be made only by qualified service personnel.

Two 8-position DIP switches (S5 and S6) are located on the main PCB inside the unit (see Figure 3). Each DIP switch has eight switch positions, numbered 1 through 8. The active position numbers are used for the following setup functions.

#### Baud Rate Selection

The S5 DIP switch settings configure the input and output baud rates for the two RS-232 COM terminals and for the RS-422 terminal pins of the interface connectors. Table 2 shows the S5 switch position settings for baud rate.

**Table 2 - S5 Setup**

| BAUD RATE | Switch Position #s |        |         |        | RS422 |     |
|-----------|--------------------|--------|---------|--------|-------|-----|
|           | COM OUT            | COM IN | COM OUT | COM IN |       |     |
|           | 1                  | 2      | 3       | 4      | 5     | 6   |
| 1200      | OFF                | OFF    | OFF     | OFF    | OFF   | OFF |
| 2400      | ON                 | OFF    | ON      | OFF    | ON    | OFF |
| 4800      | OFF                | ON     | OFF     | ON     | OFF   | ON  |
| 9600      | ON                 | ON     | ON      | ON     | ON    | ON  |

**Note:** SpeedDomes work at 4800 Baud only.

#### Alarm Contacts and Dome Type Setup

The S6 DIP switch is used for selecting the number of alarm switch contacts that can be configured for each dome. This switch also selects the dome type for each of the four groups of connectors. Only one dome type (Speed Dome family or Mini Dome) may be selected for each connector group. Table 3 shows the S6 switch position settings for these selections.

**Note:** SpeedDome, SpeedDome Ultra, and MiniDome accept a maximum of 4 alarm contacts each. SpeedDome LT does not accept any (zero) alarm contacts.

**Table 3 - S6 Setup**

| Switch Position # | Number of Alarm Contacts per Dome |     |     |    |
|-------------------|-----------------------------------|-----|-----|----|
|                   | 1                                 | 2   | 3   | 4  |
| 1                 | OFF                               | ON  | OFF | ON |
| 2                 | OFF                               | OFF | ON  | ON |

| Switch Position # | Group | Speed Domes | Mini Domes |
|-------------------|-------|-------------|------------|
| 5                 | 1     | OFF         | ON         |
| 6                 | 2     | OFF         | ON         |
| 7                 | 3     | OFF         | ON         |
| 8                 | 4     | OFF         | ON         |

## CONNECTIONS

### Sensormatic Interface Connectors

Eight 12-pin connectors on the rear of the 2083-02B Code Translator panel are used for transmitting and receiving codes with Sensormatic domes and J-boxes. The transmit (T) and receive (R) signal positions are labeled on each connector. Each connector is supplied with a mating screw terminal connector (see Figure 4).

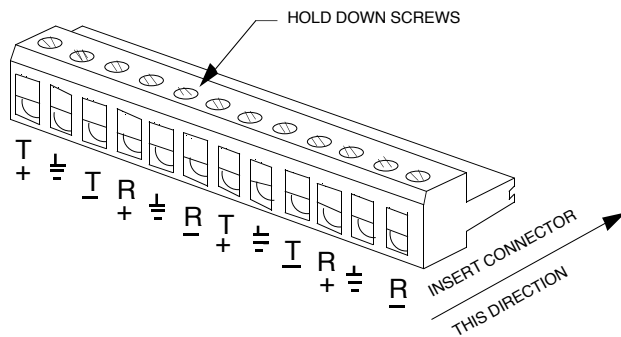


Figure 4 - Typical Mating Screw Connector

### Control Code Connector

The upper right connector on the rear of the 2083-02B Code Translator is a 12-pin connector. This is used to receive Control Code signals from 1650 or 2150 switcher units (B, W and S lines) and to provide access to an internal Form C alarm relay. When the 2083-02B receives an alarm from any SpeedDome, the internal alarm relay closes. This relay can be used for turning accessories (VCR, etc.) on or off via its Normally Open (NO) or Normally Closed (NC) terminals. The mating screw terminal connector is shown below (see Figure 5).

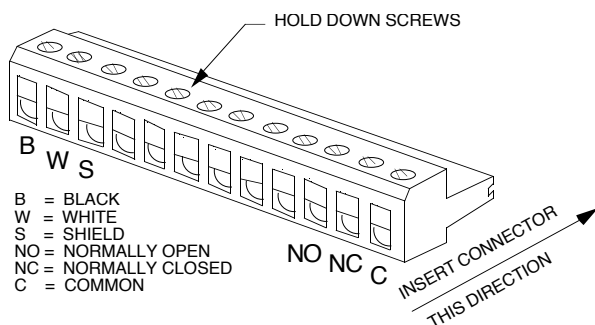


Figure 5 - Control Code Mating Connector

Connections on the above 12-pin connectors are easily made by inserting signal and ground wires into the slots of the mating connectors and tightening the hold down screws. When all wires have been connected, insert the 12-pin mating connectors into the rear panel.

### Data Line Connectors

Two DATA LINE BNC connectors are provided on the rear panel, labeled IN and OUT. The IN is used to receive control codes from the 1995 or the 1996/1024 CPU of the 2050 systems. The OUT is a loop through connection. This line must be terminated in 75 ohms. Use RG-59U video cable for all connections.

**Note:** When 1995 or 2050/1024 systems with existing B/W/S Control Code interfaces are used, they can be connected to the 2083-02B Control Code Connector, as shown in Figure 5 above.

### RS-232 Connectors

Two RS-232 connectors on the rear panel, labeled INPUT and OUTPUT, are provided for alarm interface connections. The output port is for connection to the switcher/control system alarm input ports or for cascading to another 2083-02B unit's input port or a 2096 Alarm Interface unit. The baud rate is set for these ports as shown in Table 2, page 2.

The RS-232 connectors are 8-pin modular type RJ-45 connectors. The pinout definitions for the two connectors are shown in Table 4.

**Table 4 - RS-232 Connectors Pin Definitions**

| Pin                            | INPUT  | OUTPUT |
|--------------------------------|--------|--------|
| 2                              | Shield | Shield |
| 4                              | RCD    | RCD    |
| 5                              | XMIT   | XMIT   |
| 7                              | GND    | GND    |
| Remaining Pins - No Connection |        |        |

The 2083-02B connects to switching systems with a modular cable 6003-0047-02, when distances between the units are no further than 7 feet apart. For connection to switchers where the distances exceed 7 feet, a modular cable with a wall-mount 8-pin Terminal Block, Figure 6, is provided for plug-in to the rear panel connectors. The pin definitions for this block are the same as in Table 4. See Appendix for typical connections.

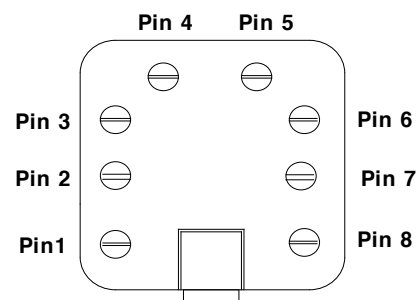


Figure 6 - 8-pin Terminal Block

## OPERATION

---

### OPERATION

#### Power Sources

DO NOT CONNECT THE EQUIPMENT TO A POWER SOURCE UNTIL READY TO "POWER UP". Make all connections to the 2083-02B code input and relay connections and set the DIP switches prior to power up.

The 2083-02B Code Translator does not contain an On/Off Switch. The socket outlet shall be located near the equipment and shall be readily accessible. The 120 V units are supplied with a pendant 3-wire cord and plug for mating to the primary source outlet. The 230 V units are supplied with a Euro style IEC 320 type inlet. A suitable detachable cord should be connected between the IEC 320 inlet and the power source. The cord should be connected between the IEC 320 inlet and the power source. The cord should conform to all national and local use code requirements. A green POWER LED indicator located on the rear panel illuminates when power is applied.

Code Translators are available in two models, depending on the power source to be used:

|              |                  |
|--------------|------------------|
| AD2083-02B   | 120VAC, 50/60 Hz |
| AD2083-02B-1 | 230VAC, 50/60 Hz |

The 2083-02B unit has fuse power protection. The fuse sizes for replacement are:

|              |                                  |
|--------------|----------------------------------|
| AD2083-02B   | 120V - 250V, SB, 0.3 A, 5 x 20mm |
| AD2083-02B-1 | 230V - 250V, T, 125 mA, 5 x 20mm |

#### Operating Indicators

When the unit is receiving valid code, the green CODE LED, on the rear panel, is illuminated. The LED stays lit for 5 seconds after code is removed. If this LED does not light, a problem in the unit or its interconnection may be indicated.

If an alarm input is activated, the green ALARM LED illuminates, and the alarm relay closes. The ALARM LED remains illuminated and the alarm relay remains closed for 10 seconds after the alarm input is removed.

#### Controlling Sensormatic Receiver Features

The 2083-02B supports the transmitted codes for all SpeedDome LT, SpeedDome, Outdoor SpeedDome, SpeedDome Ultra, and Mini-Dome models. This includes full Pan, Tilt and Lens control, 16 presets per receiver and 4 special Console to Dome commands per Speed Dome. The special Console to Dome commands are: Reset Iris, Increase V-Phase Delay, Decrease V-Phase delay and Reset Dome. Pattern programming features of the domes are also provided.

All functions are controlled via the AD keyboard, using the keys indicated in Table 5, page 5. The commands shown are all applicable to Speed Domes. Several of the commands are applicable for Mini Dome functions.

The 2083-02B also supports alarm contacts. The American Dynamics Start Alarm and Stop Alarm commands are transmitted via the RS232 output port. The alarm contact number is the American Dynamics real camera address. When an alarm is received, an internal relay closes and the green alarm LED illuminates. The alarm reading is an asynchronous operation, working on a first-in first-out basis.

The alarm contacts have one of two possible normal positions: open or closed. The 2083-02B is initialized with a default setting of all switch contacts normally closed. If any dome is configured to a non-default setting, switch normally open, then refer to Table 5 for the AD keyboard commands to set the appropriate switch state in the 2083-02B. Note that these commands must be used for each dome that is not set to normally closed, or was changed after the 2083-02B was powered up.

**Table 5 - Dome Commands**

| <b>Dome Function</b>        | <b>Keyswitch Position</b> | <b>Keyboard Command</b>              |
|-----------------------------|---------------------------|--------------------------------------|
| Call Presets                | Operate                   | 1-16 Shot (Preset)****               |
| Reset Iris                  | Operate                   | 66 Shot                              |
| Set Auxiliary 4 OFF         | Operate                   | 63 Shot                              |
| Set Auxiliary 4 ON          | Operate                   | 64 Shot                              |
| Flip (camera position 180°) | Operate                   | 67 Shot                              |
| Run Pattern # 1             | Operate                   | 70 Shot                              |
| Run Pattern # 2             | Operate                   | 71 Shot                              |
| Run Pattern # 3             | Operate                   | 72 Shot                              |
| Auto Repeat Pattern # 1     | Operate                   | 69 Shot, 70 Shot                     |
| Auto Repeat Pattern # 2     | Operate                   | 69 Shot, 71 Shot                     |
| Auto Repeat Pattern # 3     | Operate                   | 69 Shot, 72 Shot                     |
| Reset Dome                  | Program                   | 65 Shot                              |
| Set (Define) Presets 1-16   | Program                   | 1-16 Shot                            |
| Define Pattern # 1          | Program                   | 70 Shot                              |
| Define Pattern # 2          | Program                   | 71 Shot                              |
| Define Pattern # 3          | Program                   | 72 Shot                              |
| End Pattern Definition      | Program                   | 68 Shot                              |
| Save New Pattern            | Program                   | 69 Shot                              |
| Clear Pattern # 1           | Program                   | 62 Shot                              |
| Clear Pattern # 2           | Program                   | 63 Shot                              |
| Clear Pattern # 3           | Program                   | 64 Shot                              |
| Enter V Phase Adjust Mode   | Program                   | 67 Shot, followed by iris open/close |
| Exit V Phase Adjust Mode    | Program                   | 67 Shot                              |
| Dome Menu Programming       | Program                   | 66 Shot                              |

\*\*\* = Depending on keyboard, keycap may be labeled "Shot" or "Preset"




## APPENDIX




# TYPICAL SYSTEM CONNECTIONS

## 1995 TO 2083-02B

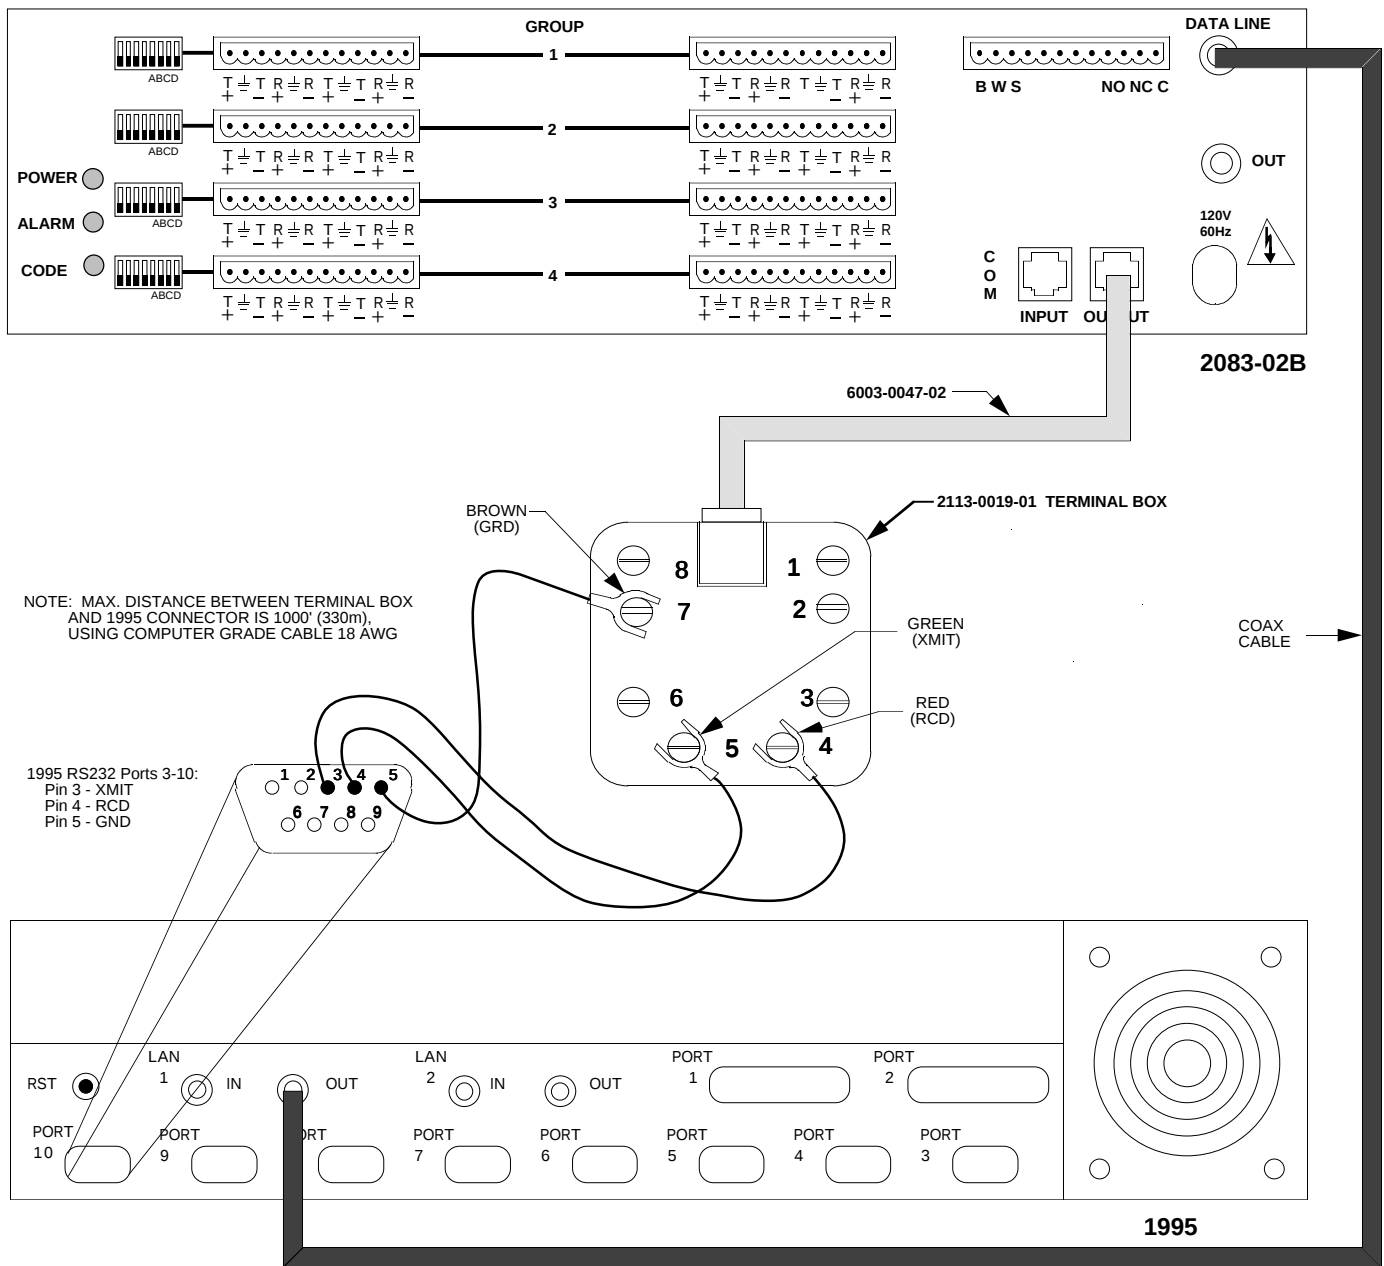


# TYPICAL SYSTEM CONNECTIONS

## 1024 CPU TO 2083-02B

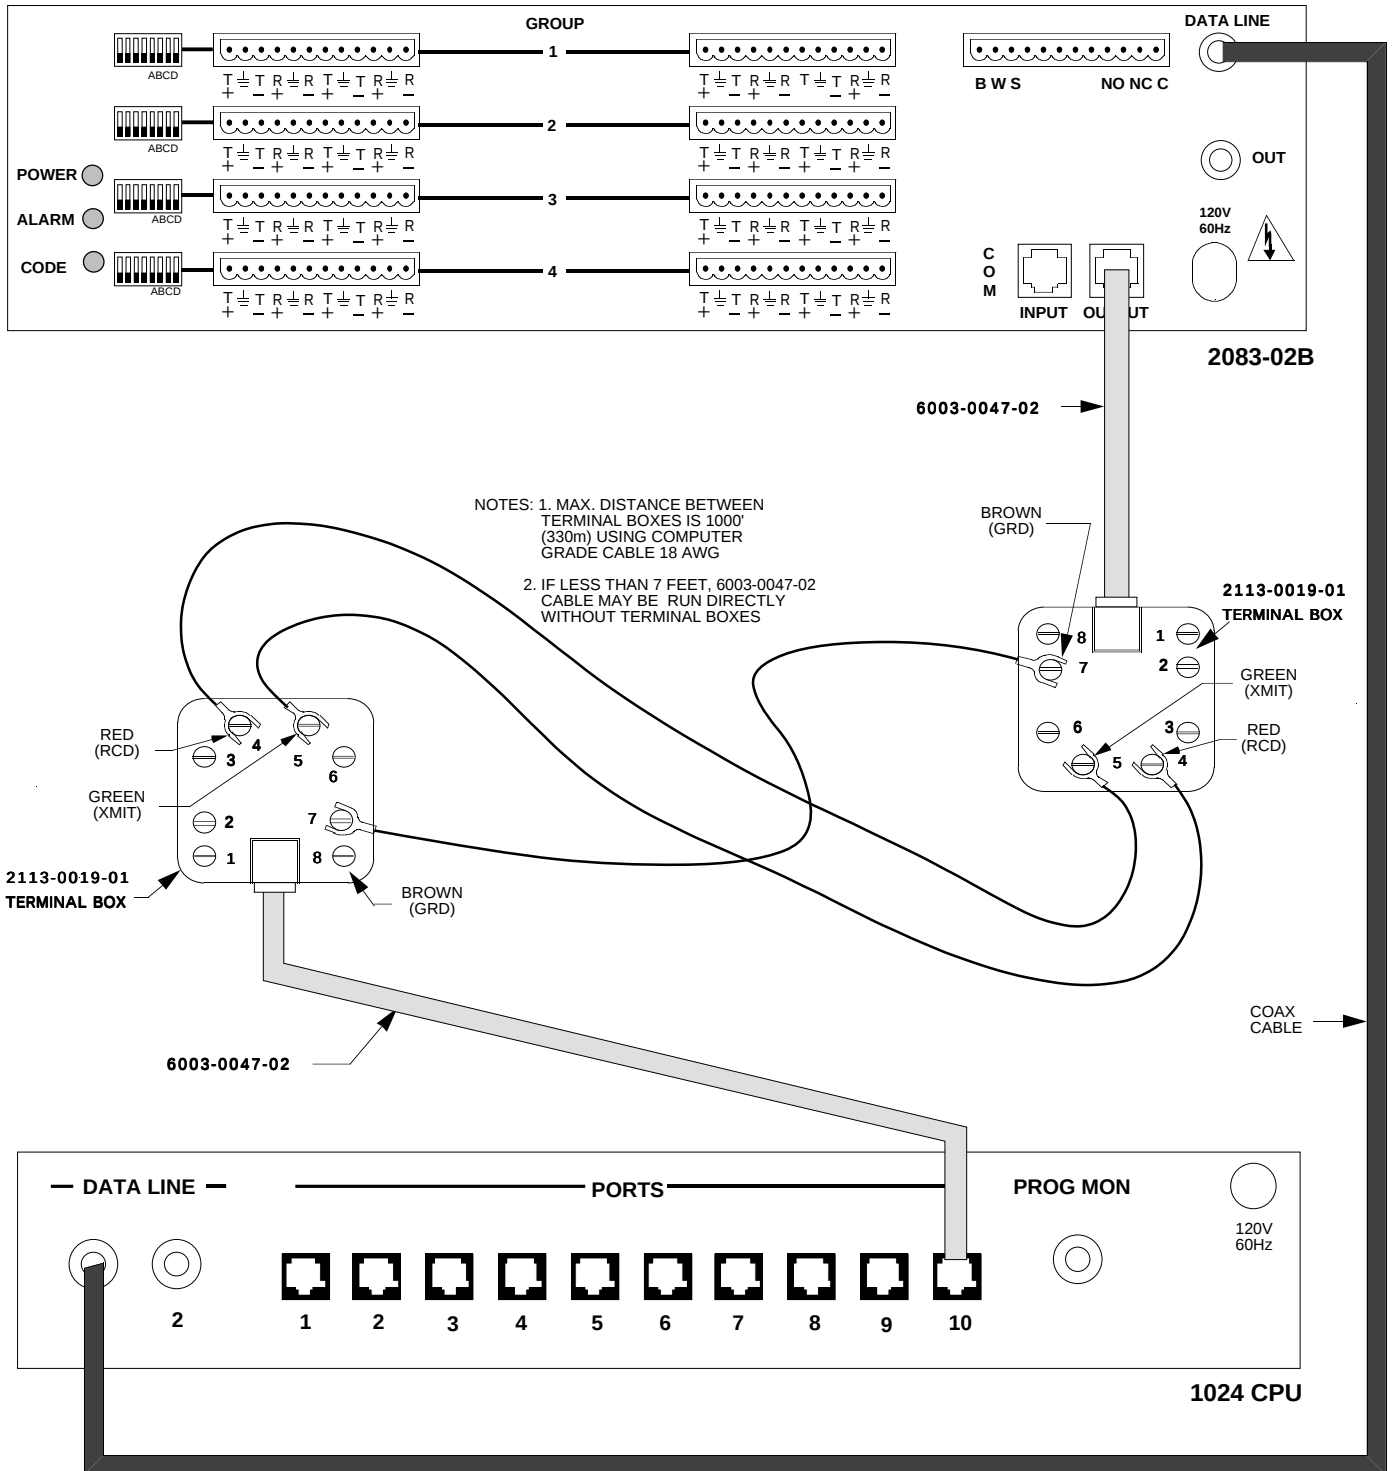


# TYPICAL SYSTEM CONNECTIONS

## 1650B TO 2083-02B

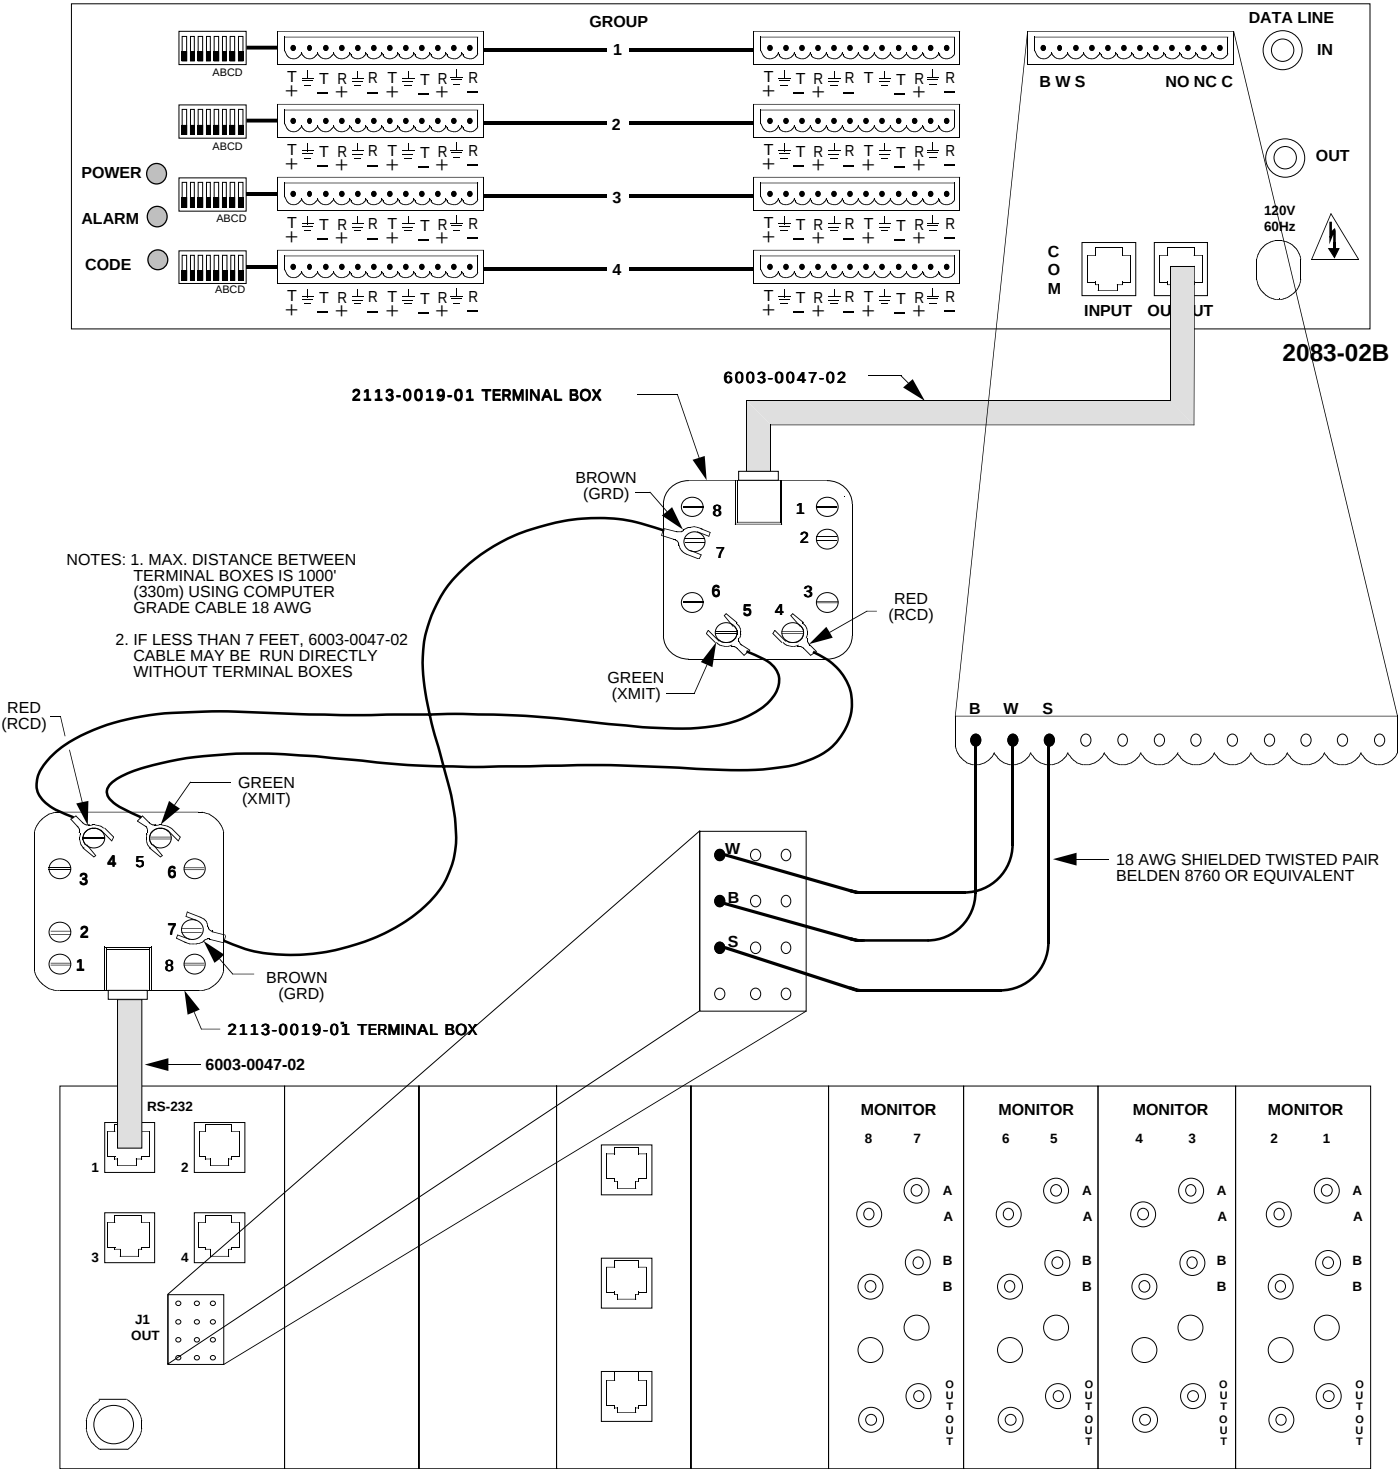

1650  
1650B

# TYPICAL SYSTEM CONNECTIONS 2150 TO 2083-02B

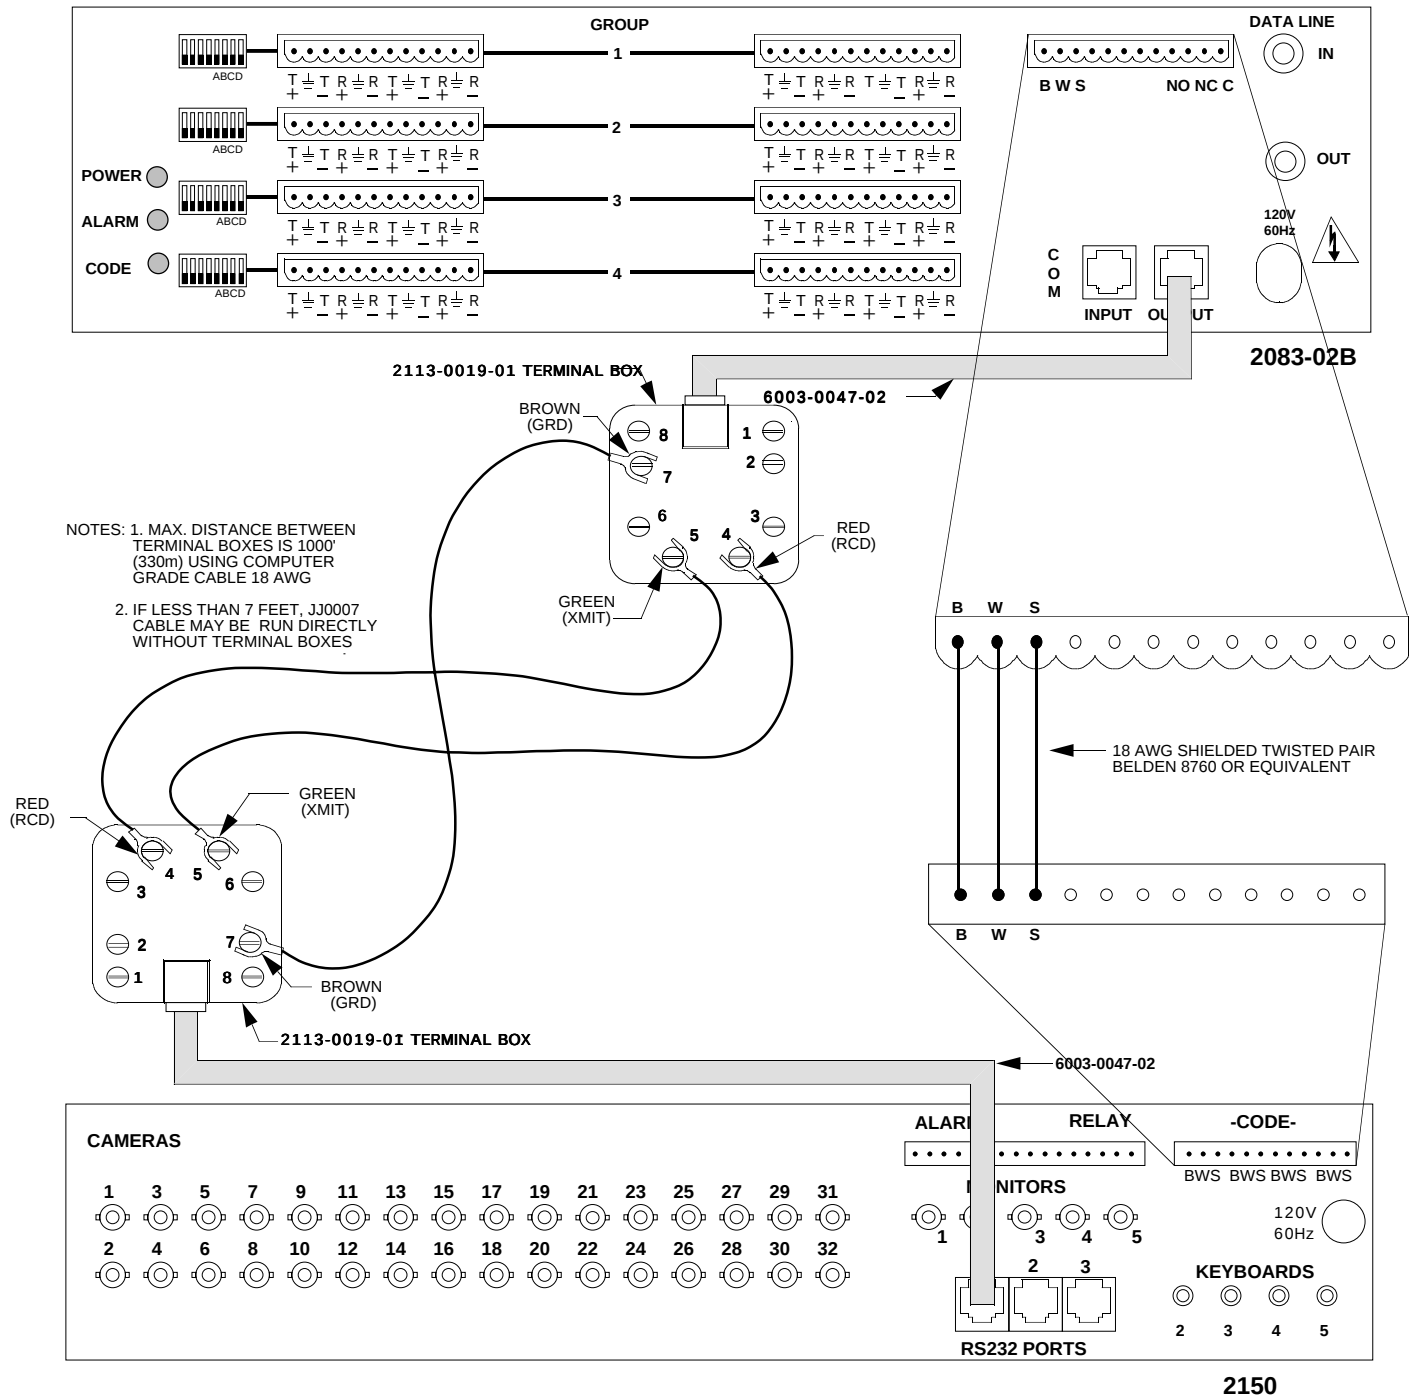

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 1                                | 1               | 1-99               |  | 1               | 1-64            |
| 2                                | 2               | 1-99               |  | 2               | 1-64            |
| 3                                | 3               | 1-99               |  | 3               | 1-64            |
| 4                                | 4               | 1-99               |  | 4               | 1-64            |
| 5                                | 5               | 1-99               |  | 5               | 1-64            |
| 6                                | 6               | 1-99               |  | 6               | 1-64            |
| 7                                | 7               | 1-99               |  | 7               | 1-64            |
| 8                                | 8               | 1-99               |  | 8               | 1-64            |
| 9                                | 9               | 1-99               |  | 9               | 1-64            |
| 10                               | 10              | 1-99               |  | 10              | 1-64            |
| 11                               | 11              | 1-99               |  | 11              | 1-64            |
| 12                               | 12              | 1-99               |  | 12              | 1-64            |
| 13                               | 13              | 1-99               |  | 13              | 1-64            |
| 14                               | 14              | 1-99               |  | 14              | 1-64            |
| 15                               | 15              | 1-99               |  | 15              | 1-64            |
| 16                               | 16              | 1-99               |  | 16              | 1-64            |
| 17                               | 17              | 1-99               |  | 17              | 1-64            |
| 18                               | 18              | 1-99               |  | 18              | 1-64            |
| 19                               | 19              | 1-99               |  | 19              | 1-64            |
| 20                               | 20              | 1-99               |  | 20              | 1-64            |
| 21                               | 21              | 1-99               |  | 21              | 1-64            |
| 22                               | 22              | 1-99               |  | 22              | 1-64            |
| 23                               | 23              | 1-99               |  | 23              | 1-64            |
| 24                               | 24              | 1-99               |  | 24              | 1-64            |
| 25                               | 25              | 1-99               |  | 25              | 1-64            |
| 26                               | 26              | 1-99               |  | 26              | 1-64            |
| 27                               | 27              | 1-99               |  | 27              | 1-64            |
| 28                               | 28              | 1-99               |  | 28              | 1-64            |
| 29                               | 29              | 1-99               |  | 29              | 1-64            |
| 30                               | 30              | 1-99               |  | 30              | 1-64            |
| 31                               | 31              | 1-99               |  | 31              | 1-64            |
| 32                               | 32              | 1-99               |  | 32              | 1-64            |
| 33                               | 33              | 1-99               |  | 33              | 1-64            |
| 34                               | 34              | 1-99               |  | 34              | 1-64            |
| 35                               | 35              | 1-99               |  | 35              | 1-64            |
| 36                               | 36              | 1-99               |  | 36              | 1-64            |
| 37                               | 37              | 1-99               |  | 37              | 1-64            |
| 38                               | 38              | 1-99               |  | 38              | 1-64            |
| 39                               | 39              | 1-99               |  | 39              | 1-64            |
| 40                               | 40              | 1-99               |  | 40              | 1-64            |
| 41                               | 41              | 1-99               |  | 41              | 1-64            |
| 42                               | 42              | 1-99               |  | 42              | 1-64            |
| 43                               | 43              | 1-99               |  | 43              | 1-64            |
| 44                               | 44              | 1-99               |  | 44              | 1-64            |
| 45                               | 45              | 1-99               |  | 45              | 1-64            |
| 46                               | 46              | 1-99               |  | 46              | 1-64            |
| 47                               | 47              | 1-99               |  | 47              | 1-64            |
| 48                               | 48              | 1-99               |  | 48              | 1-64            |
| 49                               | 49              | 1-99               |  | 49              | 1-64            |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 50                               | 50              | 1-99               |  | 50              | 1-64            |
| 51                               | 51              | 1-99               |  | 51              | 1-64            |
| 52                               | 52              | 1-99               |  | 52              | 1-64            |
| 53                               | 53              | 1-99               |  | 53              | 1-64            |
| 54                               | 54              | 1-99               |  | 54              | 1-64            |
| 55                               | 55              | 1-99               |  | 55              | 1-64            |
| 56                               | 56              | 1-99               |  | 56              | 1-64            |
| 57                               | 57              | 1-99               |  | 57              | 1-64            |
| 58                               | 58              | 1-99               |  | 58              | 1-64            |
| 59                               | 59              | 1-99               |  | 59              | 1-64            |
| 60                               | 60              | 1-99               |  | 60              | 1-64            |
| 61                               | 61              | 1-99               |  | 61              | 1-64            |
| 62                               | 62              | 1-99               |  | 62              | 1-64            |
| 63                               | 63              | 1-99               |  | 63              | 1-64            |
| 64                               | NOT USED        | 1-99               |  | NOT USED        | 1-64            |
| 65                               | 65              | 1-99               |  | 1               | 65-128          |
| 66                               | 66              | 1-99               |  | 2               | 65-128          |
| 67                               | 67              | 1-99               |  | 3               | 65-128          |
| 68                               | 68              | 1-99               |  | 4               | 65-128          |
| 69                               | 69              | 1-99               |  | 5               | 65-128          |
| 70                               | 70              | 1-99               |  | 6               | 65-128          |
| 71                               | 71              | 1-99               |  | 7               | 65-128          |
| 72                               | 72              | 1-99               |  | 8               | 65-128          |
| 73                               | 73              | 1-99               |  | 9               | 65-128          |
| 74                               | 74              | 1-99               |  | 10              | 65-128          |
| 75                               | 75              | 1-99               |  | 11              | 65-128          |
| 76                               | 76              | 1-99               |  | 12              | 65-128          |
| 77                               | 77              | 1-99               |  | 13              | 65-128          |
| 78                               | 78              | 1-99               |  | 14              | 65-128          |
| 79                               | 79              | 1-99               |  | 15              | 65-128          |
| 80                               | 80              | 1-99               |  | 16              | 65-128          |
| 81                               | 81              | 1-99               |  | 17              | 65-128          |
| 82                               | 82              | 1-99               |  | 18              | 65-128          |
| 83                               | 83              | 1-99               |  | 19              | 65-128          |
| 84                               | 84              | 1-99               |  | 20              | 65-128          |
| 85                               | 85              | 1-99               |  | 21              | 65-128          |
| 86                               | 86              | 1-99               |  | 22              | 65-128          |
| 87                               | 87              | 1-99               |  | 23              | 65-128          |
| 88                               | 88              | 1-99               |  | 24              | 65-128          |
| 89                               | 89              | 1-99               |  | 25              | 65-128          |
| 90                               | 90              | 1-99               |  | 26              | 65-128          |
| 91                               | 91              | 1-99               |  | 27              | 65-128          |
| 92                               | 92              | 1-99               |  | 28              | 65-128          |
| 93                               | 93              | 1-99               |  | 29              | 65-128          |
| 94                               | 94              | 1-99               |  | 30              | 65-128          |
| 95                               | 95              | 1-99               |  | 31              | 65-128          |
| 96                               | 96              | 1-99               |  | 32              | 65-128          |
| 97                               | 97              | 1-99               |  | 33              | 65-128          |
| 98                               | 98              | 1-99               |  | 34              | 65-128          |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 99                               | 99              | 1-99               |  | 35              | 65-128          |
| 100                              | 1               | 100-198            |  | 36              | 65-128          |
| 101                              | 2               | 100-198            |  | 37              | 65-128          |
| 102                              | 3               | 100-198            |  | 38              | 65-128          |
| 103                              | 4               | 100-198            |  | 39              | 65-128          |
| 104                              | 5               | 100-198            |  | 40              | 65-128          |
| 105                              | 6               | 100-198            |  | 41              | 65-128          |
| 106                              | 7               | 100-198            |  | 42              | 65-128          |
| 107                              | 8               | 100-198            |  | 43              | 65-128          |
| 108                              | 9               | 100-198            |  | 44              | 65-128          |
| 109                              | 10              | 100-198            |  | 45              | 65-128          |
| 110                              | 11              | 100-198            |  | 46              | 65-128          |
| 111                              | 12              | 100-198            |  | 47              | 65-128          |
| 112                              | 13              | 100-198            |  | 48              | 65-128          |
| 113                              | 14              | 100-198            |  | 49              | 65-128          |
| 114                              | 15              | 100-198            |  | 50              | 65-128          |
| 115                              | 16              | 100-198            |  | 51              | 65-128          |
| 116                              | 17              | 100-198            |  | 52              | 65-128          |
| 117                              | 18              | 100-198            |  | 53              | 65-128          |
| 118                              | 19              | 100-198            |  | 54              | 65-128          |
| 119                              | 20              | 100-198            |  | 55              | 65-128          |
| 120                              | 21              | 100-198            |  | 56              | 65-128          |
| 121                              | 22              | 100-198            |  | 57              | 65-128          |
| 122                              | 23              | 100-198            |  | 58              | 65-128          |
| 123                              | 24              | 100-198            |  | 59              | 65-128          |
| 124                              | 25              | 100-198            |  | 60              | 65-128          |
| 125                              | 26              | 100-198            |  | 61              | 65-128          |
| 126                              | 27              | 100-198            |  | 62              | 65-128          |
| 127                              | 28              | 100-198            |  | 63              | 65-128          |
| 128                              | 29              | 100-198            |  | NOT USED        | 65-128          |
| 129                              | 30              | 100-198            |  | 1               | 129-192         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 130                              | 31              | 100-198            |  | 2               | 129-192         |
| 131                              | 32              | 100-198            |  | 3               | 129-192         |
| 132                              | 33              | 100-198            |  | 4               | 129-192         |
| 133                              | 34              | 100-198            |  | 5               | 129-192         |
| 134                              | 35              | 100-198            |  | 6               | 129-192         |
| 135                              | 36              | 100-198            |  | 7               | 129-192         |
| 136                              | 37              | 100-198            |  | 8               | 129-192         |
| 137                              | 38              | 100-198            |  | 9               | 129-192         |
| 138                              | 39              | 100-198            |  | 10              | 129-192         |
| 139                              | 40              | 100-198            |  | 11              | 129-192         |
| 140                              | 41              | 100-198            |  | 12              | 129-192         |
| 141                              | 42              | 100-198            |  | 13              | 129-192         |
| 142                              | 43              | 100-198            |  | 14              | 129-192         |
| 143                              | 44              | 100-198            |  | 15              | 129-192         |
| 144                              | 45              | 100-198            |  | 16              | 129-192         |
| 145                              | 46              | 100-198            |  | 17              | 129-192         |
| 146                              | 47              | 100-198            |  | 18              | 129-192         |
| 147                              | 48              | 100-198            |  | 19              | 129-192         |
| 148                              | 49              | 100-198            |  | 20              | 129-192         |
| 149                              | 50              | 100-198            |  | 21              | 129-192         |
| 150                              | 51              | 100-198            |  | 22              | 129-192         |
| 151                              | 52              | 100-198            |  | 23              | 129-192         |
| 152                              | 53              | 100-198            |  | 24              | 129-192         |
| 153                              | 54              | 100-198            |  | 25              | 129-192         |
| 154                              | 55              | 100-198            |  | 26              | 129-192         |
| 155                              | 56              | 100-198            |  | 27              | 129-192         |
| 156                              | 57              | 100-198            |  | 28              | 129-192         |
| 157                              | 58              | 100-198            |  | 29              | 129-192         |
| 158                              | 59              | 100-198            |  | 30              | 129-192         |
| 159                              | 60              | 100-198            |  | 31              | 129-192         |
| 160                              | 61              | 100-198            |  | 32              | 129-192         |
| 161                              | 62              | 100-198            |  | 33              | 129-192         |
| 162                              | 63              | 100-198            |  | 34              | 129-192         |
| 163                              | NOT USED        | 100-198            |  | 35              | 129-192         |
| 164                              | 65              | 100-198            |  | 36              | 129-192         |
| 165                              | 66              | 100-198            |  | 37              | 129-192         |
| 166                              | 67              | 100-198            |  | 38              | 129-192         |
| 167                              | 68              | 100-198            |  | 39              | 129-192         |
| 168                              | 69              | 100-198            |  | 40              | 129-192         |
| 169                              | 70              | 100-198            |  | 41              | 129-192         |
| 170                              | 71              | 100-198            |  | 42              | 129-192         |
| 171                              | 72              | 100-198            |  | 43              | 129-192         |
| 172                              | 73              | 100-198            |  | 44              | 129-192         |
| 173                              | 74              | 100-198            |  | 45              | 129-192         |
| 174                              | 75              | 100-198            |  | 46              | 129-192         |
| 175                              | 76              | 100-198            |  | 47              | 129-192         |
| 176                              | 77              | 100-198            |  | 48              | 129-192         |
| 177                              | 78              | 100-198            |  | 49              | 129-192         |
| 178                              | 79              | 100-198            |  | 50              | 129-192         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 179                              | 80              | 100-198            |  | 51              | 129-192         |
| 180                              | 81              | 100-198            |  | 52              | 129-192         |
| 181                              | 82              | 100-198            |  | 53              | 129-192         |
| 182                              | 83              | 100-198            |  | 54              | 129-192         |
| 183                              | 84              | 100-198            |  | 55              | 129-192         |
| 184                              | 85              | 100-198            |  | 56              | 129-192         |
| 185                              | 86              | 100-198            |  | 57              | 129-192         |
| 186                              | 87              | 100-198            |  | 58              | 129-192         |
| 187                              | 88              | 100-198            |  | 59              | 129-192         |
| 188                              | 89              | 100-198            |  | 60              | 129-192         |
| 189                              | 90              | 100-198            |  | 61              | 129-192         |
| 190                              | 91              | 100-198            |  | 62              | 129-192         |
| 191                              | 92              | 100-198            |  | 63              | 129-192         |
| 192                              | 93              | 100-198            |  | NOT USED        | 129-192         |
| 193                              | 94              | 100-198            |  | 1               | 193-256         |
| 194                              | 95              | 100-198            |  | 2               | 193-256         |
| 195                              | 96              | 100-198            |  | 3               | 193-256         |
| 196                              | 97              | 100-198            |  | 4               | 193-256         |
| 197                              | 98              | 100-198            |  | 5               | 193-256         |
| 198                              | 99              | 100-198            |  | 6               | 193-256         |
| 199                              | 1               | 199-297            |  | 7               | 193-256         |
| 200                              | 2               | 199-297            |  | 8               | 193-256         |
| 201                              | 3               | 199-297            |  | 9               | 193-256         |
| 202                              | 4               | 199-297            |  | 10              | 193-256         |
| 203                              | 5               | 199-297            |  | 11              | 193-256         |
| 204                              | 6               | 199-297            |  | 12              | 193-256         |
| 205                              | 7               | 199-297            |  | 13              | 193-256         |
| 206                              | 8               | 199-297            |  | 14              | 193-256         |
| 207                              | 9               | 199-297            |  | 15              | 193-256         |
| 208                              | 10              | 199-297            |  | 16              | 193-256         |
| 209                              | 11              | 199-297            |  | 17              | 193-256         |
| 210                              | 12              | 199-297            |  | 18              | 193-256         |
| 211                              | 13              | 199-297            |  | 19              | 193-256         |
| 212                              | 14              | 199-297            |  | 20              | 193-256         |
| 213                              | 15              | 199-297            |  | 21              | 193-256         |
| 214                              | 16              | 199-297            |  | 22              | 193-256         |
| 215                              | 17              | 199-297            |  | 23              | 193-256         |
| 216                              | 18              | 199-297            |  | 24              | 193-256         |
| 217                              | 19              | 199-297            |  | 25              | 193-256         |
| 218                              | 20              | 199-297            |  | 26              | 193-256         |
| 219                              | 21              | 199-297            |  | 27              | 193-256         |
| 220                              | 22              | 199-297            |  | 28              | 193-256         |
| 221                              | 23              | 199-297            |  | 29              | 193-256         |
| 222                              | 24              | 199-297            |  | 30              | 193-256         |
| 223                              | 25              | 199-297            |  | 31              | 193-256         |
| 224                              | 26              | 199-297            |  | 32              | 193-256         |
| 225                              | 27              | 199-297            |  | 33              | 193-256         |
| 226                              | 28              | 199-297            |  | 34              | 193-256         |
| 227                              | 29              | 199-297            |  | 35              | 193-256         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 228                              | 30              | 199-297            |  | 36              | 193-256         |
| 229                              | 31              | 199-297            |  | 37              | 193-256         |
| 230                              | 32              | 199-297            |  | 38              | 193-256         |
| 231                              | 33              | 199-297            |  | 39              | 193-256         |
| 232                              | 34              | 199-297            |  | 40              | 193-256         |
| 233                              | 35              | 199-297            |  | 41              | 193-256         |
| 234                              | 36              | 199-297            |  | 42              | 193-256         |
| 235                              | 37              | 199-297            |  | 43              | 193-256         |
| 236                              | 38              | 199-297            |  | 44              | 193-256         |
| 237                              | 39              | 199-297            |  | 45              | 193-256         |
| 238                              | 40              | 199-297            |  | 46              | 193-256         |
| 239                              | 41              | 199-297            |  | 47              | 193-256         |
| 240                              | 42              | 199-297            |  | 48              | 193-256         |
| 241                              | 43              | 199-297            |  | 49              | 193-256         |
| 242                              | 44              | 199-297            |  | 50              | 193-256         |
| 243                              | 45              | 199-297            |  | 51              | 193-256         |
| 244                              | 46              | 199-297            |  | 52              | 193-256         |
| 245                              | 47              | 199-297            |  | 53              | 193-256         |
| 246                              | 48              | 199-297            |  | 54              | 193-256         |
| 247                              | 49              | 199-297            |  | 55              | 193-256         |
| 248                              | 50              | 199-297            |  | 56              | 193-256         |
| 249                              | 51              | 199-297            |  | 57              | 193-256         |
| 250                              | 52              | 199-297            |  | 58              | 193-256         |
| 251                              | 53              | 199-297            |  | 59              | 193-256         |
| 252                              | 54              | 199-297            |  | 60              | 193-256         |
| 253                              | 55              | 199-297            |  | 61              | 193-256         |
| 254                              | 56              | 199-297            |  | 62              | 193-256         |
| 255                              | 57              | 199-297            |  | 63              | 193-256         |
| 256                              | 58              | 199-297            |  | NOT USED        | 193-256         |
| 257                              | 59              | 199-297            |  | 1               | 257-320         |
| 258                              | 60              | 199-297            |  | 2               | 257-320         |
| 259                              | 61              | 199-297            |  | 3               | 257-320         |
| 260                              | 62              | 199-297            |  | 4               | 257-320         |
| 261                              | 63              | 199-297            |  | 5               | 257-320         |
| 262                              | NOT USED        | 199-297            |  | 6               | 257-320         |
| 263                              | 65              | 199-297            |  | 7               | 257-320         |
| 264                              | 66              | 199-297            |  | 8               | 257-320         |
| 265                              | 67              | 199-297            |  | 9               | 257-320         |
| 266                              | 68              | 199-297            |  | 10              | 257-320         |
| 267                              | 69              | 199-297            |  | 11              | 257-320         |
| 268                              | 70              | 199-297            |  | 12              | 257-320         |
| 269                              | 71              | 199-297            |  | 13              | 257-320         |
| 270                              | 72              | 199-297            |  | 14              | 257-320         |
| 271                              | 73              | 199-297            |  | 15              | 257-320         |
| 272                              | 74              | 199-297            |  | 16              | 257-320         |
| 273                              | 75              | 199-297            |  | 17              | 257-320         |
| 274                              | 76              | 199-297            |  | 18              | 257-320         |
| 275                              | 77              | 199-297            |  | 19              | 257-320         |
| 276                              | 78              | 199-297            |  | 20              | 257-320         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 277                              | 79              | 199-297            |  | 21              | 257-320         |
| 278                              | 80              | 199-297            |  | 22              | 257-320         |
| 279                              | 81              | 199-297            |  | 23              | 257-320         |
| 280                              | 82              | 199-297            |  | 24              | 257-320         |
| 281                              | 83              | 199-297            |  | 25              | 257-320         |
| 282                              | 84              | 199-297            |  | 26              | 257-320         |
| 283                              | 85              | 199-297            |  | 27              | 257-320         |
| 284                              | 86              | 199-297            |  | 28              | 257-320         |
| 285                              | 87              | 199-297            |  | 29              | 257-320         |
| 286                              | 88              | 199-297            |  | 30              | 257-320         |
| 287                              | 89              | 199-297            |  | 31              | 257-320         |
| 288                              | 90              | 199-297            |  | 32              | 257-320         |
| 289                              | 91              | 199-297            |  | 33              | 257-320         |
| 290                              | 92              | 199-297            |  | 34              | 257-320         |
| 291                              | 93              | 199-297            |  | 35              | 257-320         |
| 292                              | 94              | 199-297            |  | 36              | 257-320         |
| 293                              | 95              | 199-297            |  | 37              | 257-320         |
| 294                              | 96              | 199-297            |  | 38              | 257-320         |
| 295                              | 97              | 199-297            |  | 39              | 257-320         |
| 296                              | 98              | 199-297            |  | 40              | 257-320         |
| 297                              | 99              | 199-297            |  | 41              | 257-320         |
| 298                              | 1               | 298-396            |  | 42              | 257-320         |
| 299                              | 2               | 298-396            |  | 43              | 257-320         |
| 300                              | 3               | 298-396            |  | 44              | 257-320         |
| 301                              | 4               | 298-396            |  | 45              | 257-320         |
| 302                              | 5               | 298-396            |  | 46              | 257-320         |
| 303                              | 6               | 298-396            |  | 47              | 257-320         |
| 304                              | 7               | 298-396            |  | 48              | 257-320         |
| 305                              | 8               | 298-396            |  | 49              | 257-320         |
| 306                              | 9               | 298-396            |  | 50              | 257-320         |
| 307                              | 10              | 298-396            |  | 51              | 257-320         |
| 308                              | 11              | 298-396            |  | 52              | 257-320         |
| 309                              | 12              | 298-396            |  | 53              | 257-320         |
| 310                              | 13              | 298-396            |  | 54              | 257-320         |
| 311                              | 14              | 298-396            |  | 55              | 257-320         |
| 312                              | 15              | 298-396            |  | 56              | 257-320         |
| 313                              | 16              | 298-396            |  | 57              | 257-320         |
| 314                              | 17              | 298-396            |  | 58              | 257-320         |
| 315                              | 18              | 298-396            |  | 59              | 257-320         |
| 316                              | 19              | 298-396            |  | 60              | 257-320         |
| 317                              | 20              | 298-396            |  | 61              | 257-320         |
| 318                              | 21              | 298-396            |  | 62              | 257-320         |
| 319                              | 22              | 298-396            |  | 63              | 257-320         |
| 320                              | 23              | 298-396            |  | NOT USED        | 257-320         |
| 321                              | 24              | 298-396            |  | 1               | 321-384         |
| 322                              | 25              | 298-396            |  | 2               | 321-384         |
| 323                              | 26              | 298-396            |  | 3               | 321-384         |
| 324                              | 27              | 298-396            |  | 4               | 321-384         |
| 325                              | 28              | 298-396            |  | 5               | 321-384         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 326                              | 29              | 298-396            |  | 6               | 321-384         |
| 327                              | 30              | 298-396            |  | 7               | 321-384         |
| 328                              | 31              | 298-396            |  | 8               | 321-384         |
| 329                              | 32              | 298-396            |  | 9               | 321-384         |
| 330                              | 33              | 298-396            |  | 10              | 321-384         |
| 331                              | 34              | 298-396            |  | 11              | 321-384         |
| 332                              | 35              | 298-396            |  | 12              | 321-384         |
| 333                              | 36              | 298-396            |  | 13              | 321-384         |
| 334                              | 37              | 298-396            |  | 14              | 321-384         |
| 335                              | 38              | 298-396            |  | 15              | 321-384         |
| 336                              | 39              | 298-396            |  | 16              | 321-384         |
| 337                              | 40              | 298-396            |  | 17              | 321-384         |
| 338                              | 41              | 298-396            |  | 18              | 321-384         |
| 339                              | 42              | 298-396            |  | 19              | 321-384         |
| 340                              | 43              | 298-396            |  | 20              | 321-384         |
| 341                              | 44              | 298-396            |  | 21              | 321-384         |
| 342                              | 45              | 298-396            |  | 22              | 321-384         |
| 343                              | 46              | 298-396            |  | 23              | 321-384         |
| 344                              | 47              | 298-396            |  | 24              | 321-384         |
| 345                              | 48              | 298-396            |  | 25              | 321-384         |
| 346                              | 49              | 298-396            |  | 26              | 321-384         |
| 347                              | 50              | 298-396            |  | 27              | 321-384         |
| 348                              | 51              | 298-396            |  | 28              | 321-384         |
| 349                              | 52              | 298-396            |  | 29              | 321-384         |
| 350                              | 53              | 298-396            |  | 30              | 321-384         |
| 351                              | 54              | 298-396            |  | 31              | 321-384         |
| 352                              | 55              | 298-396            |  | 32              | 321-384         |
| 353                              | 56              | 298-396            |  | 33              | 321-384         |
| 354                              | 57              | 298-396            |  | 34              | 321-384         |
| 355                              | 58              | 298-396            |  | 35              | 321-384         |
| 356                              | 59              | 298-396            |  | 36              | 321-384         |
| 357                              | 60              | 298-396            |  | 37              | 321-384         |
| 358                              | 61              | 298-396            |  | 38              | 321-384         |
| 359                              | 62              | 298-396            |  | 39              | 321-384         |
| 360                              | 63              | 298-396            |  | 40              | 321-384         |
| 361                              | NOT USED        | 298-396            |  | 41              | 321-384         |
| 362                              | 65              | 298-396            |  | 42              | 321-384         |
| 363                              | 66              | 298-396            |  | 43              | 321-384         |
| 364                              | 67              | 298-396            |  | 44              | 321-384         |
| 365                              | 68              | 298-396            |  | 45              | 321-384         |
| 366                              | 69              | 298-396            |  | 46              | 321-384         |
| 367                              | 70              | 298-396            |  | 47              | 321-384         |
| 368                              | 71              | 298-396            |  | 48              | 321-384         |
| 369                              | 72              | 298-396            |  | 49              | 321-384         |
| 370                              | 73              | 298-396            |  | 50              | 321-384         |
| 371                              | 74              | 298-396            |  | 51              | 321-384         |
| 372                              | 75              | 298-396            |  | 52              | 321-384         |
| 373                              | 76              | 298-396            |  | 53              | 321-384         |
| 374                              | 77              | 298-396            |  | 54              | 321-384         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 375                              | 78              | 298-396            |  | 55              | 321-384         |
| 376                              | 79              | 298-396            |  | 56              | 321-384         |
| 377                              | 80              | 298-396            |  | 57              | 321-384         |
| 378                              | 81              | 298-396            |  | 58              | 321-384         |
| 379                              | 82              | 298-396            |  | 59              | 321-384         |
| 380                              | 83              | 298-396            |  | 60              | 321-384         |
| 381                              | 84              | 298-396            |  | 61              | 321-384         |
| 382                              | 85              | 298-396            |  | 62              | 321-384         |
| 383                              | 86              | 298-396            |  | 63              | 321-384         |
| 384                              | 87              | 298-396            |  | NOT USED        | 321-384         |
| 385                              | 88              | 298-396            |  | 1               | 385-448         |
| 386                              | 89              | 298-396            |  | 2               | 385-448         |
| 387                              | 90              | 298-396            |  | 3               | 385-448         |
| 388                              | 91              | 298-396            |  | 4               | 385-448         |
| 389                              | 92              | 298-396            |  | 5               | 385-448         |
| 390                              | 93              | 298-396            |  | 6               | 385-448         |
| 391                              | 94              | 298-396            |  | 7               | 385-448         |
| 392                              | 95              | 298-396            |  | 8               | 385-448         |
| 393                              | 96              | 298-396            |  | 9               | 385-448         |
| 394                              | 97              | 298-396            |  | 10              | 385-448         |
| 395                              | 98              | 298-396            |  | 11              | 385-448         |
| 396                              | 99              | 298-396            |  | 12              | 385-448         |
| 397                              | 1               | 397-495            |  | 13              | 385-448         |
| 398                              | 2               | 397-495            |  | 14              | 385-448         |
| 399                              | 3               | 397-495            |  | 15              | 385-448         |
| 400                              | 4               | 397-495            |  | 16              | 385-448         |
| 401                              | 5               | 397-495            |  | 17              | 385-448         |
| 402                              | 6               | 397-495            |  | 18              | 385-448         |
| 403                              | 7               | 397-495            |  | 19              | 385-448         |
| 404                              | 8               | 397-495            |  | 20              | 385-448         |
| 405                              | 9               | 397-495            |  | 21              | 385-448         |
| 406                              | 10              | 397-495            |  | 22              | 385-448         |
| 407                              | 11              | 397-495            |  | 23              | 385-448         |
| 408                              | 12              | 397-495            |  | 24              | 385-448         |
| 409                              | 13              | 397-495            |  | 25              | 385-448         |
| 410                              | 14              | 397-495            |  | 26              | 385-448         |
| 411                              | 15              | 397-495            |  | 27              | 385-448         |
| 412                              | 16              | 397-495            |  | 28              | 385-448         |
| 413                              | 17              | 397-495            |  | 29              | 385-448         |
| 414                              | 18              | 397-495            |  | 30              | 385-448         |
| 415                              | 19              | 397-495            |  | 31              | 385-448         |
| 416                              | 20              | 397-495            |  | 32              | 385-448         |
| 417                              | 21              | 397-495            |  | 33              | 385-448         |
| 418                              | 22              | 397-495            |  | 34              | 385-448         |
| 419                              | 23              | 397-495            |  | 35              | 385-448         |
| 420                              | 24              | 397-495            |  | 36              | 385-448         |
| 421                              | 25              | 397-495            |  | 37              | 385-448         |
| 422                              | 26              | 397-495            |  | 38              | 385-448         |
| 423                              | 27              | 397-495            |  | 39              | 385-448         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 424                              | 28              | 397-495            |  | 40              | 385-448         |
| 425                              | 29              | 397-495            |  | 41              | 385-448         |
| 426                              | 30              | 397-495            |  | 42              | 385-448         |
| 427                              | 31              | 397-495            |  | 43              | 385-448         |
| 428                              | 32              | 397-495            |  | 44              | 385-448         |
| 429                              | 33              | 397-495            |  | 45              | 385-448         |
| 430                              | 34              | 397-495            |  | 46              | 385-448         |
| 431                              | 35              | 397-495            |  | 47              | 385-448         |
| 432                              | 36              | 397-495            |  | 48              | 385-448         |
| 433                              | 37              | 397-495            |  | 49              | 385-448         |
| 434                              | 38              | 397-495            |  | 50              | 385-448         |
| 435                              | 39              | 397-495            |  | 51              | 385-448         |
| 436                              | 40              | 397-495            |  | 52              | 385-448         |
| 437                              | 41              | 397-495            |  | 53              | 385-448         |
| 438                              | 42              | 397-495            |  | 54              | 385-448         |
| 439                              | 43              | 397-495            |  | 55              | 385-448         |
| 440                              | 44              | 397-495            |  | 56              | 385-448         |
| 441                              | 45              | 397-495            |  | 57              | 385-448         |
| 442                              | 46              | 397-495            |  | 58              | 385-448         |
| 443                              | 47              | 397-495            |  | 59              | 385-448         |
| 444                              | 48              | 397-495            |  | 60              | 385-448         |
| 445                              | 49              | 397-495            |  | 61              | 385-448         |
| 446                              | 50              | 397-495            |  | 62              | 385-448         |
| 447                              | 51              | 397-495            |  | 63              | 385-448         |
| 448                              | 52              | 397-495            |  | NOT USED        | 385-448         |
| 449                              | 53              | 397-495            |  | 1               | 449-512         |
| 450                              | 54              | 397-495            |  | 2               | 449-512         |
| 451                              | 55              | 397-495            |  | 3               | 449-512         |
| 452                              | 56              | 397-495            |  | 4               | 449-512         |
| 453                              | 57              | 397-495            |  | 5               | 449-512         |
| 454                              | 58              | 397-495            |  | 6               | 449-512         |
| 455                              | 59              | 397-495            |  | 7               | 449-512         |
| 456                              | 60              | 397-495            |  | 8               | 449-512         |
| 457                              | 61              | 397-495            |  | 9               | 449-512         |
| 458                              | 62              | 397-495            |  | 10              | 449-512         |
| 459                              | 63              | 397-495            |  | 11              | 449-512         |
| 460                              | NOT USED        | 397-495            |  | 12              | 449-512         |
| 461                              | 65              | 397-495            |  | 13              | 449-512         |
| 462                              | 66              | 397-495            |  | 14              | 449-512         |
| 463                              | 67              | 397-495            |  | 15              | 449-512         |
| 464                              | 68              | 397-495            |  | 16              | 449-512         |
| 465                              | 69              | 397-495            |  | 17              | 449-512         |
| 466                              | 70              | 397-495            |  | 18              | 449-512         |
| 467                              | 71              | 397-495            |  | 19              | 449-512         |
| 468                              | 72              | 397-495            |  | 20              | 449-512         |
| 469                              | 73              | 397-495            |  | 21              | 449-512         |
| 470                              | 74              | 397-495            |  | 22              | 449-512         |
| 471                              | 75              | 397-495            |  | 23              | 449-512         |
| 472                              | 76              | 397-495            |  | 24              | 449-512         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 473                              | 77              | 397-495            |  | 25              | 449-512         |
| 474                              | 78              | 397-495            |  | 26              | 449-512         |
| 475                              | 79              | 397-495            |  | 27              | 449-512         |
| 476                              | 80              | 397-495            |  | 28              | 449-512         |
| 477                              | 81              | 397-495            |  | 29              | 449-512         |
| 478                              | 82              | 397-495            |  | 30              | 449-512         |
| 479                              | 83              | 397-495            |  | 31              | 449-512         |
| 480                              | 84              | 397-495            |  | 32              | 449-512         |
| 481                              | 85              | 397-495            |  | 33              | 449-512         |
| 482                              | 86              | 397-495            |  | 34              | 449-512         |
| 483                              | 87              | 397-495            |  | 35              | 449-512         |
| 484                              | 88              | 397-495            |  | 36              | 449-512         |
| 485                              | 89              | 397-495            |  | 37              | 449-512         |
| 486                              | 90              | 397-495            |  | 38              | 449-512         |
| 487                              | 91              | 397-495            |  | 39              | 449-512         |
| 488                              | 92              | 397-495            |  | 40              | 449-512         |
| 489                              | 93              | 397-495            |  | 41              | 449-512         |
| 490                              | 94              | 397-495            |  | 42              | 449-512         |
| 491                              | 95              | 397-495            |  | 43              | 449-512         |
| 492                              | 96              | 397-495            |  | 44              | 449-512         |
| 493                              | 97              | 397-495            |  | 45              | 449-512         |
| 494                              | 98              | 397-495            |  | 46              | 449-512         |
| 495                              | 99              | 397-495            |  | 47              | 449-512         |
| 496                              | 1               | 496-594            |  | 48              | 449-512         |
| 497                              | 2               | 496-594            |  | 49              | 449-512         |
| 498                              | 3               | 496-594            |  | 50              | 449-512         |
| 499                              | 4               | 496-594            |  | 51              | 449-512         |
| 500                              | 5               | 496-594            |  | 52              | 449-512         |
| 501                              | 6               | 496-594            |  | 53              | 449-512         |
| 502                              | 7               | 496-594            |  | 54              | 449-512         |
| 503                              | 8               | 496-594            |  | 55              | 449-512         |
| 504                              | 9               | 496-594            |  | 56              | 449-512         |
| 505                              | 10              | 496-594            |  | 57              | 449-512         |
| 506                              | 11              | 496-594            |  | 58              | 449-512         |
| 507                              | 12              | 496-594            |  | 59              | 449-512         |
| 508                              | 13              | 496-594            |  | 60              | 449-512         |
| 509                              | 14              | 496-594            |  | 61              | 449-512         |
| 510                              | 15              | 496-594            |  | 62              | 449-512         |
| 511                              | 16              | 496-594            |  | 63              | 449-512         |
| 512                              | 17              | 496-594            |  | NOT USED        | 449-512         |
| 513                              | 18              | 496-594            |  | 1               | 513-576         |
| 514                              | 19              | 496-594            |  | 2               | 513-576         |
| 515                              | 20              | 496-594            |  | 3               | 513-576         |
| 516                              | 21              | 496-594            |  | 4               | 513-576         |
| 517                              | 22              | 496-594            |  | 5               | 513-576         |
| 518                              | 23              | 496-594            |  | 6               | 513-576         |
| 519                              | 24              | 496-594            |  | 7               | 513-576         |
| 520                              | 25              | 496-594            |  | 8               | 513-576         |
| 521                              | 26              | 496-594            |  | 9               | 513-576         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 522                              | 27              | 496-594            |  | 10              | 513-576         |
| 523                              | 28              | 496-594            |  | 11              | 513-576         |
| 524                              | 29              | 496-594            |  | 12              | 513-576         |
| 525                              | 30              | 496-594            |  | 13              | 513-576         |
| 526                              | 31              | 496-594            |  | 14              | 513-576         |
| 527                              | 32              | 496-594            |  | 15              | 513-576         |
| 528                              | 33              | 496-594            |  | 16              | 513-576         |
| 529                              | 34              | 496-594            |  | 17              | 513-576         |
| 530                              | 35              | 496-594            |  | 18              | 513-576         |
| 531                              | 36              | 496-594            |  | 19              | 513-576         |
| 532                              | 37              | 496-594            |  | 20              | 513-576         |
| 533                              | 38              | 496-594            |  | 21              | 513-576         |
| 534                              | 39              | 496-594            |  | 22              | 513-576         |
| 535                              | 40              | 496-594            |  | 23              | 513-576         |
| 536                              | 41              | 496-594            |  | 24              | 513-576         |
| 537                              | 42              | 496-594            |  | 25              | 513-576         |
| 538                              | 43              | 496-594            |  | 26              | 513-576         |
| 539                              | 44              | 496-594            |  | 27              | 513-576         |
| 540                              | 45              | 496-594            |  | 28              | 513-576         |
| 541                              | 46              | 496-594            |  | 29              | 513-576         |
| 542                              | 47              | 496-594            |  | 30              | 513-576         |
| 543                              | 48              | 496-594            |  | 31              | 513-576         |
| 544                              | 49              | 496-594            |  | 32              | 513-576         |
| 545                              | 50              | 496-594            |  | 33              | 513-576         |
| 546                              | 51              | 496-594            |  | 34              | 513-576         |
| 547                              | 52              | 496-594            |  | 35              | 513-576         |
| 548                              | 53              | 496-594            |  | 36              | 513-576         |
| 549                              | 54              | 496-594            |  | 37              | 513-576         |
| 550                              | 55              | 496-594            |  | 38              | 513-576         |
| 551                              | 56              | 496-594            |  | 39              | 513-576         |
| 552                              | 57              | 496-594            |  | 40              | 513-576         |
| 553                              | 58              | 496-594            |  | 41              | 513-576         |
| 554                              | 59              | 496-594            |  | 42              | 513-576         |
| 555                              | 60              | 496-594            |  | 43              | 513-576         |
| 556                              | 61              | 496-594            |  | 44              | 513-576         |
| 557                              | 62              | 496-594            |  | 45              | 513-576         |
| 558                              | 63              | 496-594            |  | 46              | 513-576         |
| 559                              | NOT USED        | 496-594            |  | 47              | 513-576         |
| 560                              | 65              | 496-594            |  | 48              | 513-576         |
| 561                              | 66              | 496-594            |  | 49              | 513-576         |
| 562                              | 67              | 496-594            |  | 50              | 513-576         |
| 563                              | 68              | 496-594            |  | 51              | 513-576         |
| 564                              | 69              | 496-594            |  | 52              | 513-576         |
| 565                              | 70              | 496-594            |  | 53              | 513-576         |
| 566                              | 71              | 496-594            |  | 54              | 513-576         |
| 567                              | 72              | 496-594            |  | 55              | 513-576         |
| 568                              | 73              | 496-594            |  | 56              | 513-576         |
| 569                              | 74              | 496-594            |  | 57              | 513-576         |
| 570                              | 75              | 496-594            |  | 58              | 513-576         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 571                              | 76              | 496-594            |  | 59              | 513-576         |
| 572                              | 77              | 496-594            |  | 60              | 513-576         |
| 573                              | 78              | 496-594            |  | 61              | 513-576         |
| 574                              | 79              | 496-594            |  | 62              | 513-576         |
| 575                              | 80              | 496-594            |  | 63              | 513-576         |
| 576                              | 81              | 496-594            |  | NOT USED        | 513-576         |
| 577                              | 82              | 496-594            |  | 1               | 577-640         |
| 578                              | 83              | 496-594            |  | 2               | 577-640         |
| 579                              | 84              | 496-594            |  | 3               | 577-640         |
| 580                              | 85              | 496-594            |  | 4               | 577-640         |
| 581                              | 86              | 496-594            |  | 5               | 577-640         |
| 582                              | 87              | 496-594            |  | 6               | 577-640         |
| 583                              | 88              | 496-594            |  | 7               | 577-640         |
| 584                              | 89              | 496-594            |  | 8               | 577-640         |
| 585                              | 90              | 496-594            |  | 9               | 577-640         |
| 586                              | 91              | 496-594            |  | 10              | 577-640         |
| 587                              | 92              | 496-594            |  | 11              | 577-640         |
| 588                              | 93              | 496-594            |  | 12              | 577-640         |
| 589                              | 94              | 496-594            |  | 13              | 577-640         |
| 590                              | 95              | 496-594            |  | 14              | 577-640         |
| 591                              | 96              | 496-594            |  | 15              | 577-640         |
| 592                              | 97              | 496-594            |  | 16              | 577-640         |
| 593                              | 98              | 496-594            |  | 17              | 577-640         |
| 594                              | 99              | 496-594            |  | 18              | 577-640         |
| 595                              | 1               | 595-693            |  | 19              | 577-640         |
| 596                              | 2               | 595-693            |  | 20              | 577-640         |
| 597                              | 3               | 595-693            |  | 21              | 577-640         |
| 598                              | 4               | 595-693            |  | 22              | 577-640         |
| 599                              | 5               | 595-693            |  | 23              | 577-640         |
| 600                              | 6               | 595-693            |  | 24              | 577-640         |
| 601                              | 7               | 595-693            |  | 25              | 577-640         |
| 602                              | 8               | 595-693            |  | 26              | 577-640         |
| 603                              | 9               | 595-693            |  | 27              | 577-640         |
| 604                              | 10              | 595-693            |  | 28              | 577-640         |
| 605                              | 11              | 595-693            |  | 29              | 577-640         |
| 606                              | 12              | 595-693            |  | 30              | 577-640         |
| 607                              | 13              | 595-693            |  | 31              | 577-640         |
| 608                              | 14              | 595-693            |  | 32              | 577-640         |
| 609                              | 15              | 595-693            |  | 33              | 577-640         |
| 610                              | 16              | 595-693            |  | 34              | 577-640         |
| 611                              | 17              | 595-693            |  | 35              | 577-640         |
| 612                              | 18              | 595-693            |  | 36              | 577-640         |
| 613                              | 19              | 595-693            |  | 37              | 577-640         |
| 614                              | 20              | 595-693            |  | 38              | 577-640         |
| 615                              | 21              | 595-693            |  | 39              | 577-640         |
| 616                              | 22              | 595-693            |  | 40              | 577-640         |
| 617                              | 23              | 595-693            |  | 41              | 577-640         |
| 618                              | 24              | 595-693            |  | 42              | 577-640         |
| 619                              | 25              | 595-693            |  | 43              | 577-640         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 620                              | 26              | 595-693            |  | 44              | 577-640         |
| 621                              | 27              | 595-693            |  | 45              | 577-640         |
| 622                              | 28              | 595-693            |  | 46              | 577-640         |
| 623                              | 29              | 595-693            |  | 47              | 577-640         |
| 624                              | 30              | 595-693            |  | 48              | 577-640         |
| 625                              | 31              | 595-693            |  | 49              | 577-640         |
| 626                              | 32              | 595-693            |  | 50              | 577-640         |
| 627                              | 33              | 595-693            |  | 51              | 577-640         |
| 628                              | 34              | 595-693            |  | 52              | 577-640         |
| 629                              | 35              | 595-693            |  | 53              | 577-640         |
| 630                              | 36              | 595-693            |  | 54              | 577-640         |
| 631                              | 37              | 595-693            |  | 55              | 577-640         |
| 632                              | 38              | 595-693            |  | 56              | 577-640         |
| 633                              | 39              | 595-693            |  | 57              | 577-640         |
| 634                              | 40              | 595-693            |  | 58              | 577-640         |
| 635                              | 41              | 595-693            |  | 59              | 577-640         |
| 636                              | 42              | 595-693            |  | 60              | 577-640         |
| 637                              | 43              | 595-693            |  | 61              | 577-640         |
| 638                              | 44              | 595-693            |  | 62              | 577-640         |
| 639                              | 45              | 595-693            |  | 63              | 577-640         |
| 640                              | 46              | 595-693            |  | NOT USED        | 577-640         |
| 641                              | 47              | 595-693            |  | 1               | 641-704         |
| 642                              | 48              | 595-693            |  | 2               | 641-704         |
| 643                              | 49              | 595-693            |  | 3               | 641-704         |
| 644                              | 50              | 595-693            |  | 4               | 641-704         |
| 645                              | 51              | 595-693            |  | 5               | 641-704         |
| 646                              | 52              | 595-693            |  | 6               | 641-704         |
| 647                              | 53              | 595-693            |  | 7               | 641-704         |
| 648                              | 54              | 595-693            |  | 8               | 641-704         |
| 649                              | 55              | 595-693            |  | 9               | 641-704         |
| 650                              | 56              | 595-693            |  | 10              | 641-704         |
| 651                              | 57              | 595-693            |  | 11              | 641-704         |
| 652                              | 58              | 595-693            |  | 12              | 641-704         |
| 653                              | 59              | 595-693            |  | 13              | 641-704         |
| 654                              | 60              | 595-693            |  | 14              | 641-704         |
| 655                              | 61              | 595-693            |  | 15              | 641-704         |
| 656                              | 62              | 595-693            |  | 16              | 641-704         |
| 657                              | 63              | 595-693            |  | 17              | 641-704         |
| 658                              | NOT USED        | 595-693            |  | 18              | 641-704         |
| 659                              | 65              | 595-693            |  | 19              | 641-704         |
| 660                              | 66              | 595-693            |  | 20              | 641-704         |
| 661                              | 67              | 595-693            |  | 21              | 641-704         |
| 662                              | 68              | 595-693            |  | 22              | 641-704         |
| 663                              | 69              | 595-693            |  | 23              | 641-704         |
| 664                              | 70              | 595-693            |  | 24              | 641-704         |
| 665                              | 71              | 595-693            |  | 25              | 641-704         |
| 666                              | 72              | 595-693            |  | 26              | 641-704         |
| 667                              | 73              | 595-693            |  | 27              | 641-704         |
| 668                              | 74              | 595-693            |  | 28              | 641-704         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 669                              | 75              | 595-693            |  | 29              | 641-704         |
| 670                              | 76              | 595-693            |  | 30              | 641-704         |
| 671                              | 77              | 595-693            |  | 31              | 641-704         |
| 672                              | 78              | 595-693            |  | 32              | 641-704         |
| 673                              | 79              | 595-693            |  | 33              | 641-704         |
| 674                              | 80              | 595-693            |  | 34              | 641-704         |
| 675                              | 81              | 595-693            |  | 35              | 641-704         |
| 676                              | 82              | 595-693            |  | 36              | 641-704         |
| 677                              | 83              | 595-693            |  | 37              | 641-704         |
| 678                              | 84              | 595-693            |  | 38              | 641-704         |
| 679                              | 85              | 595-693            |  | 39              | 641-704         |
| 680                              | 86              | 595-693            |  | 40              | 641-704         |
| 681                              | 87              | 595-693            |  | 41              | 641-704         |
| 682                              | 88              | 595-693            |  | 42              | 641-704         |
| 683                              | 89              | 595-693            |  | 43              | 641-704         |
| 684                              | 90              | 595-693            |  | 44              | 641-704         |
| 685                              | 91              | 595-693            |  | 45              | 641-704         |
| 686                              | 92              | 595-693            |  | 46              | 641-704         |
| 687                              | 93              | 595-693            |  | 47              | 641-704         |
| 688                              | 94              | 595-693            |  | 48              | 641-704         |
| 689                              | 95              | 595-693            |  | 49              | 641-704         |
| 690                              | 96              | 595-693            |  | 50              | 641-704         |
| 691                              | 97              | 595-693            |  | 51              | 641-704         |
| 692                              | 98              | 595-693            |  | 52              | 641-704         |
| 693                              | 99              | 595-693            |  | 53              | 641-704         |
| 694                              | 1               | 694-792            |  | 54              | 641-704         |
| 695                              | 2               | 694-792            |  | 55              | 641-704         |
| 696                              | 3               | 694-792            |  | 56              | 641-704         |
| 697                              | 4               | 694-792            |  | 57              | 641-704         |
| 698                              | 5               | 694-792            |  | 58              | 641-704         |
| 699                              | 6               | 694-792            |  | 59              | 641-704         |
| 700                              | 7               | 694-792            |  | 60              | 641-704         |
| 701                              | 8               | 694-792            |  | 61              | 641-704         |
| 702                              | 9               | 694-792            |  | 62              | 641-704         |
| 703                              | 10              | 694-792            |  | 63              | 641-704         |
| 704                              | 11              | 694-792            |  | NOT USED        | 641-704         |
| 705                              | 12              | 694-792            |  | 1               | 705-768         |
| 706                              | 13              | 694-792            |  | 2               | 705-768         |
| 707                              | 14              | 694-792            |  | 3               | 705-768         |
| 708                              | 15              | 694-792            |  | 4               | 705-768         |
| 709                              | 16              | 694-792            |  | 5               | 705-768         |
| 710                              | 17              | 694-792            |  | 6               | 705-768         |
| 711                              | 18              | 694-792            |  | 7               | 705-768         |
| 712                              | 19              | 694-792            |  | 8               | 705-768         |
| 713                              | 20              | 694-792            |  | 9               | 705-768         |
| 714                              | 21              | 694-792            |  | 10              | 705-768         |
| 715                              | 22              | 694-792            |  | 11              | 705-768         |
| 716                              | 23              | 694-792            |  | 12              | 705-768         |
| 717                              | 24              | 694-792            |  | 13              | 705-768         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 718                              | 25              | 694-792            |  | 14              | 705-768         |
| 719                              | 26              | 694-792            |  | 15              | 705-768         |
| 720                              | 27              | 694-792            |  | 16              | 705-768         |
| 721                              | 28              | 694-792            |  | 17              | 705-768         |
| 722                              | 29              | 694-792            |  | 18              | 705-768         |
| 723                              | 30              | 694-792            |  | 19              | 705-768         |
| 724                              | 31              | 694-792            |  | 20              | 705-768         |
| 725                              | 32              | 694-792            |  | 21              | 705-768         |
| 726                              | 33              | 694-792            |  | 22              | 705-768         |
| 727                              | 34              | 694-792            |  | 23              | 705-768         |
| 728                              | 35              | 694-792            |  | 24              | 705-768         |
| 729                              | 36              | 694-792            |  | 25              | 705-768         |
| 730                              | 37              | 694-792            |  | 26              | 705-768         |
| 731                              | 38              | 694-792            |  | 27              | 705-768         |
| 732                              | 39              | 694-792            |  | 28              | 705-768         |
| 733                              | 40              | 694-792            |  | 29              | 705-768         |
| 734                              | 41              | 694-792            |  | 30              | 705-768         |
| 735                              | 42              | 694-792            |  | 31              | 705-768         |
| 736                              | 43              | 694-792            |  | 32              | 705-768         |
| 737                              | 44              | 694-792            |  | 33              | 705-768         |
| 738                              | 45              | 694-792            |  | 34              | 705-768         |
| 739                              | 46              | 694-792            |  | 35              | 705-768         |
| 740                              | 47              | 694-792            |  | 36              | 705-768         |
| 741                              | 48              | 694-792            |  | 37              | 705-768         |
| 742                              | 49              | 694-792            |  | 38              | 705-768         |
| 743                              | 50              | 694-792            |  | 39              | 705-768         |
| 744                              | 51              | 694-792            |  | 40              | 705-768         |
| 745                              | 52              | 694-792            |  | 41              | 705-768         |
| 746                              | 53              | 694-792            |  | 42              | 705-768         |
| 747                              | 54              | 694-792            |  | 43              | 705-768         |
| 748                              | 55              | 694-792            |  | 44              | 705-768         |
| 749                              | 56              | 694-792            |  | 45              | 705-768         |
| 750                              | 57              | 694-792            |  | 46              | 705-768         |
| 751                              | 58              | 694-792            |  | 47              | 705-768         |
| 752                              | 59              | 694-792            |  | 48              | 705-768         |
| 753                              | 60              | 694-792            |  | 49              | 705-768         |
| 754                              | 61              | 694-792            |  | 50              | 705-768         |
| 755                              | 62              | 694-792            |  | 51              | 705-768         |
| 756                              | 63              | 694-792            |  | 52              | 705-768         |
| 757                              | NOT USED        | 694-792            |  | 53              | 705-768         |
| 758                              | 65              | 694-792            |  | 54              | 705-768         |
| 759                              | 66              | 694-792            |  | 55              | 705-768         |
| 760                              | 67              | 694-792            |  | 56              | 705-768         |
| 761                              | 68              | 694-792            |  | 57              | 705-768         |
| 762                              | 69              | 694-792            |  | 58              | 705-768         |
| 763                              | 70              | 694-792            |  | 59              | 705-768         |
| 764                              | 71              | 694-792            |  | 60              | 705-768         |
| 765                              | 72              | 694-792            |  | 61              | 705-768         |
| 766                              | 73              | 694-792            |  | 62              | 705-768         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 767                              | 74              | 694-792            |  | 63              | 705-768         |
| 768                              | 75              | 694-792            |  | NOT USED        | 705-768         |
| 769                              | 76              | 694-792            |  | 1               | 769-832         |
| 770                              | 77              | 694-792            |  | 2               | 769-832         |
| 771                              | 78              | 694-792            |  | 3               | 769-832         |
| 772                              | 79              | 694-792            |  | 4               | 769-832         |
| 773                              | 80              | 694-792            |  | 5               | 769-832         |
| 774                              | 81              | 694-792            |  | 6               | 769-832         |
| 775                              | 82              | 694-792            |  | 7               | 769-832         |
| 776                              | 83              | 694-792            |  | 8               | 769-832         |
| 777                              | 84              | 694-792            |  | 9               | 769-832         |
| 778                              | 85              | 694-792            |  | 10              | 769-832         |
| 779                              | 86              | 694-792            |  | 11              | 769-832         |
| 780                              | 87              | 694-792            |  | 12              | 769-832         |
| 781                              | 88              | 694-792            |  | 13              | 769-832         |
| 782                              | 89              | 694-792            |  | 14              | 769-832         |
| 783                              | 90              | 694-792            |  | 15              | 769-832         |
| 784                              | 91              | 694-792            |  | 16              | 769-832         |
| 785                              | 92              | 694-792            |  | 17              | 769-832         |
| 786                              | 93              | 694-792            |  | 18              | 769-832         |
| 787                              | 94              | 694-792            |  | 19              | 769-832         |
| 788                              | 95              | 694-792            |  | 20              | 769-832         |
| 789                              | 96              | 694-792            |  | 21              | 769-832         |
| 790                              | 97              | 694-792            |  | 22              | 769-832         |
| 791                              | 98              | 694-792            |  | 23              | 769-832         |
| 792                              | 99              | 694-792            |  | 24              | 769-832         |
| 793                              | 1               | 793-891            |  | 25              | 769-832         |
| 794                              | 2               | 793-891            |  | 26              | 769-832         |
| 795                              | 3               | 793-891            |  | 27              | 769-832         |
| 796                              | 4               | 793-891            |  | 28              | 769-832         |
| 797                              | 5               | 793-891            |  | 29              | 769-832         |
| 798                              | 6               | 793-891            |  | 30              | 769-832         |
| 799                              | 7               | 793-891            |  | 31              | 769-832         |
| 800                              | 8               | 793-891            |  | 32              | 769-832         |
| 801                              | 9               | 793-891            |  | 33              | 769-832         |
| 802                              | 10              | 793-891            |  | 34              | 769-832         |
| 803                              | 11              | 793-891            |  | 35              | 769-832         |
| 804                              | 12              | 793-891            |  | 36              | 769-832         |
| 805                              | 13              | 793-891            |  | 37              | 769-832         |
| 806                              | 14              | 793-891            |  | 38              | 769-832         |
| 807                              | 15              | 793-891            |  | 39              | 769-832         |
| 808                              | 16              | 793-891            |  | 40              | 769-832         |
| 809                              | 17              | 793-891            |  | 41              | 769-832         |
| 810                              | 18              | 793-891            |  | 42              | 769-832         |
| 811                              | 19              | 793-891            |  | 43              | 769-832         |
| 812                              | 20              | 793-891            |  | 44              | 769-832         |
| 813                              | 21              | 793-891            |  | 45              | 769-832         |
| 814                              | 22              | 793-891            |  | 46              | 769-832         |
| 815                              | 23              | 793-891            |  | 47              | 769-832         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 816                              | 24              | 793-891            |  | 48              | 769-832         |
| 817                              | 25              | 793-891            |  | 49              | 769-832         |
| 818                              | 26              | 793-891            |  | 50              | 769-832         |
| 819                              | 27              | 793-891            |  | 51              | 769-832         |
| 820                              | 28              | 793-891            |  | 52              | 769-832         |
| 821                              | 29              | 793-891            |  | 53              | 769-832         |
| 822                              | 30              | 793-891            |  | 54              | 769-832         |
| 823                              | 31              | 793-891            |  | 55              | 769-832         |
| 824                              | 32              | 793-891            |  | 56              | 769-832         |
| 825                              | 33              | 793-891            |  | 57              | 769-832         |
| 826                              | 34              | 793-891            |  | 58              | 769-832         |
| 827                              | 35              | 793-891            |  | 59              | 769-832         |
| 828                              | 36              | 793-891            |  | 60              | 769-832         |
| 829                              | 37              | 793-891            |  | 61              | 769-832         |
| 830                              | 38              | 793-891            |  | 62              | 769-832         |
| 831                              | 39              | 793-891            |  | 63              | 769-832         |
| 832                              | 40              | 793-891            |  | NOT USED        | 769-832         |
| 833                              | 41              | 793-891            |  | 1               | 833-896         |
| 834                              | 42              | 793-891            |  | 2               | 833-896         |
| 835                              | 43              | 793-891            |  | 3               | 833-896         |
| 836                              | 44              | 793-891            |  | 4               | 833-896         |
| 837                              | 45              | 793-891            |  | 5               | 833-896         |
| 838                              | 46              | 793-891            |  | 6               | 833-896         |
| 839                              | 47              | 793-891            |  | 7               | 833-896         |
| 840                              | 48              | 793-891            |  | 8               | 833-896         |
| 841                              | 49              | 793-891            |  | 9               | 833-896         |
| 842                              | 50              | 793-891            |  | 10              | 833-896         |
| 843                              | 51              | 793-891            |  | 11              | 833-896         |
| 844                              | 52              | 793-891            |  | 12              | 833-896         |
| 845                              | 53              | 793-891            |  | 13              | 833-896         |
| 846                              | 54              | 793-891            |  | 14              | 833-896         |
| 847                              | 55              | 793-891            |  | 15              | 833-896         |
| 848                              | 56              | 793-891            |  | 16              | 833-896         |
| 849                              | 57              | 793-891            |  | 17              | 833-896         |
| 850                              | 58              | 793-891            |  | 18              | 833-896         |
| 851                              | 59              | 793-891            |  | 19              | 833-896         |
| 852                              | 60              | 793-891            |  | 20              | 833-896         |
| 853                              | 61              | 793-891            |  | 21              | 833-896         |
| 854                              | 62              | 793-891            |  | 22              | 833-896         |
| 855                              | 63              | 793-891            |  | 23              | 833-896         |
| 856                              | NOT USED        | 793-891            |  | 24              | 833-896         |
| 857                              | 65              | 793-891            |  | 25              | 833-896         |
| 858                              | 66              | 793-891            |  | 26              | 833-896         |
| 859                              | 67              | 793-891            |  | 27              | 833-896         |
| 860                              | 68              | 793-891            |  | 28              | 833-896         |
| 861                              | 69              | 793-891            |  | 29              | 833-896         |
| 862                              | 70              | 793-891            |  | 30              | 833-896         |
| 863                              | 71              | 793-891            |  | 31              | 833-896         |
| 864                              | 72              | 793-891            |  | 32              | 833-896         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 865                              | 73              | 793-891            |  | 33              | 833-896         |
| 866                              | 74              | 793-891            |  | 34              | 833-896         |
| 867                              | 75              | 793-891            |  | 35              | 833-896         |
| 868                              | 76              | 793-891            |  | 36              | 833-896         |
| 869                              | 77              | 793-891            |  | 37              | 833-896         |
| 870                              | 78              | 793-891            |  | 38              | 833-896         |
| 871                              | 79              | 793-891            |  | 39              | 833-896         |
| 872                              | 80              | 793-891            |  | 40              | 833-896         |
| 873                              | 81              | 793-891            |  | 41              | 833-896         |
| 874                              | 82              | 793-891            |  | 42              | 833-896         |
| 875                              | 83              | 793-891            |  | 43              | 833-896         |
| 876                              | 84              | 793-891            |  | 44              | 833-896         |
| 877                              | 85              | 793-891            |  | 45              | 833-896         |
| 878                              | 86              | 793-891            |  | 46              | 833-896         |
| 879                              | 87              | 793-891            |  | 47              | 833-896         |
| 880                              | 88              | 793-891            |  | 48              | 833-896         |
| 881                              | 89              | 793-891            |  | 49              | 833-896         |
| 882                              | 90              | 793-891            |  | 50              | 833-896         |
| 883                              | 91              | 793-891            |  | 51              | 833-896         |
| 884                              | 92              | 793-891            |  | 52              | 833-896         |
| 885                              | 93              | 793-891            |  | 53              | 833-896         |
| 886                              | 94              | 793-891            |  | 54              | 833-896         |
| 887                              | 95              | 793-891            |  | 55              | 833-896         |
| 888                              | 96              | 793-891            |  | 56              | 833-896         |
| 889                              | 97              | 793-891            |  | 57              | 833-896         |
| 890                              | 98              | 793-891            |  | 58              | 833-896         |
| 891                              | 99              | 793-891            |  | 59              | 833-896         |
| 892                              | 1               | 892-990            |  | 60              | 833-896         |
| 893                              | 2               | 892-990            |  | 61              | 833-896         |
| 894                              | 3               | 892-990            |  | 62              | 833-896         |
| 895                              | 4               | 892-990            |  | 63              | 833-896         |
| 896                              | 5               | 892-990            |  | NOT USED        | 833-896         |
| 897                              | 6               | 892-990            |  | 1               | 897-960         |
| 898                              | 7               | 892-990            |  | 2               | 897-960         |
| 899                              | 8               | 892-990            |  | 3               | 897-960         |
| 900                              | 9               | 892-990            |  | 4               | 897-960         |
| 901                              | 10              | 892-990            |  | 5               | 897-960         |
| 902                              | 11              | 892-990            |  | 6               | 897-960         |
| 903                              | 12              | 892-990            |  | 7               | 897-960         |
| 904                              | 13              | 892-990            |  | 8               | 897-960         |
| 905                              | 14              | 892-990            |  | 9               | 897-960         |
| 906                              | 15              | 892-990            |  | 10              | 897-960         |
| 907                              | 16              | 892-990            |  | 11              | 897-960         |
| 908                              | 17              | 892-990            |  | 12              | 897-960         |
| 909                              | 18              | 892-990            |  | 13              | 897-960         |
| 910                              | 19              | 892-990            |  | 14              | 897-960         |
| 911                              | 20              | 892-990            |  | 15              | 897-960         |
| 912                              | 21              | 892-990            |  | 16              | 897-960         |
| 913                              | 22              | 892-990            |  | 17              | 897-960         |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 914                              | 23              | 892-990            |  | 18              | 897-960         |
| 915                              | 24              | 892-990            |  | 19              | 897-960         |
| 916                              | 25              | 892-990            |  | 20              | 897-960         |
| 917                              | 26              | 892-990            |  | 21              | 897-960         |
| 918                              | 27              | 892-990            |  | 22              | 897-960         |
| 919                              | 28              | 892-990            |  | 23              | 897-960         |
| 920                              | 29              | 892-990            |  | 24              | 897-960         |
| 921                              | 30              | 892-990            |  | 25              | 897-960         |
| 922                              | 31              | 892-990            |  | 26              | 897-960         |
| 923                              | 32              | 892-990            |  | 27              | 897-960         |
| 924                              | 33              | 892-990            |  | 28              | 897-960         |
| 925                              | 34              | 892-990            |  | 29              | 897-960         |
| 926                              | 35              | 892-990            |  | 30              | 897-960         |
| 927                              | 36              | 892-990            |  | 31              | 897-960         |
| 928                              | 37              | 892-990            |  | 32              | 897-960         |
| 929                              | 38              | 892-990            |  | 33              | 897-960         |
| 930                              | 39              | 892-990            |  | 34              | 897-960         |
| 931                              | 40              | 892-990            |  | 35              | 897-960         |
| 932                              | 41              | 892-990            |  | 36              | 897-960         |
| 933                              | 42              | 892-990            |  | 37              | 897-960         |
| 934                              | 43              | 892-990            |  | 38              | 897-960         |
| 935                              | 44              | 892-990            |  | 39              | 897-960         |
| 936                              | 45              | 892-990            |  | 40              | 897-960         |
| 937                              | 46              | 892-990            |  | 41              | 897-960         |
| 938                              | 47              | 892-990            |  | 42              | 897-960         |
| 939                              | 48              | 892-990            |  | 43              | 897-960         |
| 940                              | 49              | 892-990            |  | 44              | 897-960         |
| 941                              | 50              | 892-990            |  | 45              | 897-960         |
| 942                              | 51              | 892-990            |  | 46              | 897-960         |
| 943                              | 52              | 892-990            |  | 47              | 897-960         |
| 944                              | 53              | 892-990            |  | 48              | 897-960         |
| 945                              | 54              | 892-990            |  | 49              | 897-960         |
| 946                              | 55              | 892-990            |  | 50              | 897-960         |
| 947                              | 56              | 892-990            |  | 51              | 897-960         |
| 948                              | 57              | 892-990            |  | 52              | 897-960         |
| 949                              | 58              | 892-990            |  | 53              | 897-960         |
| 950                              | 59              | 892-990            |  | 54              | 897-960         |
| 951                              | 60              | 892-990            |  | 55              | 897-960         |
| 952                              | 61              | 892-990            |  | 56              | 897-960         |
| 953                              | 62              | 892-990            |  | 57              | 897-960         |
| 954                              | 63              | 892-990            |  | 58              | 897-960         |
| 955                              | NOT USED        | 892-990            |  | 59              | 897-960         |
| 956                              | 65              | 892-990            |  | 60              | 897-960         |
| 957                              | 66              | 892-990            |  | 61              | 897-960         |
| 958                              | 67              | 892-990            |  | 62              | 897-960         |
| 959                              | 68              | 892-990            |  | 63              | 897-960         |
| 960                              | 69              | 892-990            |  | NOT USED        | 897-960         |
| 961                              | 70              | 892-990            |  | 1               | 961-1024        |
| 962                              | 71              | 892-990            |  | 2               | 961-1024        |

## SpeedDome Address Tables

| Video<br>Input/Camera<br>Numbers | Dome<br>Address | AD2083-02<br>Group |  | Dome<br>Address | AD2091<br>Group |
|----------------------------------|-----------------|--------------------|--|-----------------|-----------------|
| 963                              | 72              | 892-990            |  | 3               | 961-1024        |
| 964                              | 73              | 892-990            |  | 4               | 961-1024        |
| 965                              | 74              | 892-990            |  | 5               | 961-1024        |
| 966                              | 75              | 892-990            |  | 6               | 961-1024        |
| 967                              | 76              | 892-990            |  | 7               | 961-1024        |
| 968                              | 77              | 892-990            |  | 8               | 961-1024        |
| 969                              | 78              | 892-990            |  | 9               | 961-1024        |
| 970                              | 79              | 892-990            |  | 10              | 961-1024        |
| 971                              | 80              | 892-990            |  | 11              | 961-1024        |
| 972                              | 81              | 892-990            |  | 12              | 961-1024        |
| 973                              | 82              | 892-990            |  | 13              | 961-1024        |
| 974                              | 83              | 892-990            |  | 14              | 961-1024        |
| 975                              | 84              | 892-990            |  | 15              | 961-1024        |
| 976                              | 85              | 892-990            |  | 16              | 961-1024        |
| 977                              | 86              | 892-990            |  | 17              | 961-1024        |
| 978                              | 87              | 892-990            |  | 18              | 961-1024        |
| 979                              | 88              | 892-990            |  | 19              | 961-1024        |
| 980                              | 89              | 892-990            |  | 20              | 961-1024        |
| 981                              | 90              | 892-990            |  | 21              | 961-1024        |
| 982                              | 91              | 892-990            |  | 22              | 961-1024        |
| 983                              | 92              | 892-990            |  | 23              | 961-1024        |
| 984                              | 93              | 892-990            |  | 24              | 961-1024        |
| 985                              | 94              | 892-990            |  | 25              | 961-1024        |
| 986                              | 95              | 892-990            |  | 26              | 961-1024        |
| 987                              | 96              | 892-990            |  | 27              | 961-1024        |
| 988                              | 97              | 892-990            |  | 28              | 961-1024        |
| 989                              | 98              | 892-990            |  | 29              | 961-1024        |
| 990                              | 99              | 892-990            |  | 30              | 961-1024        |
| 991                              | 1               | 991-1024           |  | 31              | 961-1024        |
| 992                              | 2               | 991-1024           |  | 32              | 961-1024        |
| 993                              | 3               | 991-1024           |  | 33              | 961-1024        |
| 994                              | 4               | 991-1024           |  | 34              | 961-1024        |
| 995                              | 5               | 991-1024           |  | 35              | 961-1024        |
| 996                              | 6               | 991-1024           |  | 36              | 961-1024        |
| 997                              | 7               | 991-1024           |  | 37              | 961-1024        |
| 998                              | 8               | 991-1024           |  | 38              | 961-1024        |
| 999                              | 9               | 991-1024           |  | 39              | 961-1024        |
| 1000                             | 10              | 991-1024           |  | 40              | 961-1024        |
| 1001                             | 11              | 991-1024           |  | 41              | 961-1024        |
| 1002                             | 12              | 991-1024           |  | 42              | 961-1024        |
| 1003                             | 13              | 991-1024           |  | 43              | 961-1024        |
| 1004                             | 14              | 991-1024           |  | 44              | 961-1024        |
| 1005                             | 15              | 991-1024           |  | 45              | 961-1024        |
| 1006                             | 16              | 991-1024           |  | 46              | 961-1024        |
| 1007                             | 17              | 991-1024           |  | 47              | 961-1024        |
| 1008                             | 18              | 991-1024           |  | 48              | 961-1024        |
| 1009                             | 19              | 991-1024           |  | 49              | 961-1024        |
| 1010                             | 20              | 991-1024           |  | 50              | 961-1024        |
| 1011                             | 21              | 991-1024           |  | 51              | 961-1024        |

## SpeedDome Address Tables

[illegible]





# DECLARATION OF CONFORMITY

According to ISO/IEC Guide 22 and EN45014

**Manufacturer's Name:** Sensormatic Electronics Corporation

**Manufacturer's Address:** 1 Blue Hill Plaza  
2<sup>nd</sup> Floor  
Pearl River, New York, 10965  
USA

**Declares, that the product(s) listed below:**

Name/Type: Code\_Translator

Model Number: AD2083-02B-1

**complies with all applicable directives as demonstrated by conformance to the following Product Specifications:**

Safety: EN 60950: 1992

EMC: EN 50130-4: 1995  
EN 55022: 1994 , Class B  
EN 61000-3-2: 1995  
EN 61000-3-3: 1995  
EN 61000-4-2: 1995  
EN 61000-4-3: 1996  
EN 61000-4-4: 1995  
EN 61000-4-5: 1995  
EN 61000-4-6: 1996  
EN 61000-4-11: 1994

**Supplementary Information:**

The products herewith comply with the requirements of the Low Voltage Directive, 73/23/EEC as amended by 93/68/EEC, and the EMC Directive, 89/339/EEC as amended by 93/68/EEC.

Pearl River, NY, USA

1 December, 2000



Harold D. Johnson, Ph.D.  
Director of Engineering

European Contact: Sensormatic France S.A.  
7, rue Alexis de Tocqueville, Parc de Haute Technologie, 92183 ANTONY CEDEX

## SPECIFICATIONS

**Electrical Ratings:** AD2083-02B: 120 VAC, 50/60 Hz, 8 W  
ADS2083-02B-1: 230 VAC, 50/60 Hz, 100 mA

**Alarm Relay Contacts:** SPDT Form C, unpowered  
**Contact Ratings:** 0.3 A at 24 VAC, 1.0 A at 30 VDC

**Mounting:** Free standing or rack

**Weight:** 7 lbs.

**Dimensions:** 3.5" H x 17" W x 7.75" D (89 x 432 x 197 mm)

Sensormatic Video Systems Division  
One Blue Hill Plaza  
Pearl River, New York, 10965  
Business: (845) 624-7600  
Technical Support Center: 1-800-442-2225  
FAX: (845) 624-7685